


FENCE PROJECT


TECHNICAL DATASHEET PANEL M01 - NAME: PRIVACY WALL FENCE



Lamri Panel
(Profile 4332S)
* Dimensions:
104 x 10 mm
* Material: Aluminum
* Thickness: 0.47mm
* Weight: 1.85kg/6m



Main Frame
(Profile HR-15)
* Dimensions:
60 x 50 mm
* Material: Aluminum
* Thickness: 1.5mm
* Weight: 9.79kg/6m

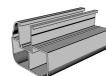

Frame Cover Clip
(Profile HR-16)
* Dimensions:
19.9 x 19.65 mm
* Material: Aluminum
* Thickness: 1.5mm
* Weight: 1.14kg/6m



Post Rear Cover
(Profile HR-04)
* Dimensions:
24.6 x 9 mm
* Material: Aluminum
* Thickness: 1.2 mm
* Weight: 1.31 kg/6m



Post Rear Cover - Type A
(Profile HR-04A)
* Dimensions:
35 x 24.5 mm
* Material: Aluminum
* Thickness: 1.2 mm
* Weight: 1.31 kg/6m



Clip Strip
(Profile HR-22)
* Dimensions:
34.4 x 24mm
* Material: Aluminum
* Thickness: 1.2 mm
* Weight: 2.3 kg/6m




Self-Drilling Screws
(Dome Head)
* Dimensions:
ST4.2 x 17 mm
* Material: (SUS304)
* Color: Yes
* Quantity: 60 pcs




Base Plate
(Profile ϕ 34)
* Dimensions:
90.4 x 600 mm
* Material: Iron
* Thickness: 2.0 mm
* Weight: 0.95 kg/pcs




Main Post
(Profile HR01A)
* Dimensions:
90.4 x 600 mm
* Material: Aluminum
* Thickness: 2.25 - 3.0mm
* Weight: 23.79kg/6m

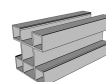


Bottom Cover
(Profile BC)
* Dimensions:
99 x 99 x 22 mm
* Material: Aluminum
* Thickness: 2.0mm
* Weight: kg/pcs

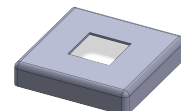


Post Cap
(Profile PC)
* Dimensions:
94 x 94 x 30 mm
* Material: Aluminum
* Thickness: 1.0mm
* Weight: kg/pcs

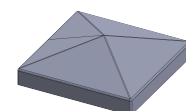


Connector Bracket
(Pat HR15)
* Dimensions:
90 x 80 x 39.1mm
* Material: Aluminum
* Thickness: 1 mm
* Weight: 0.12 kg/pcs

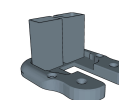


Self-Drilling Screws
(Flat Head)
* Dimensions:
ST4.8 x 20 mm
* Material: SUS304
* Color-match to the Panel
* Quantity: 25 pcs

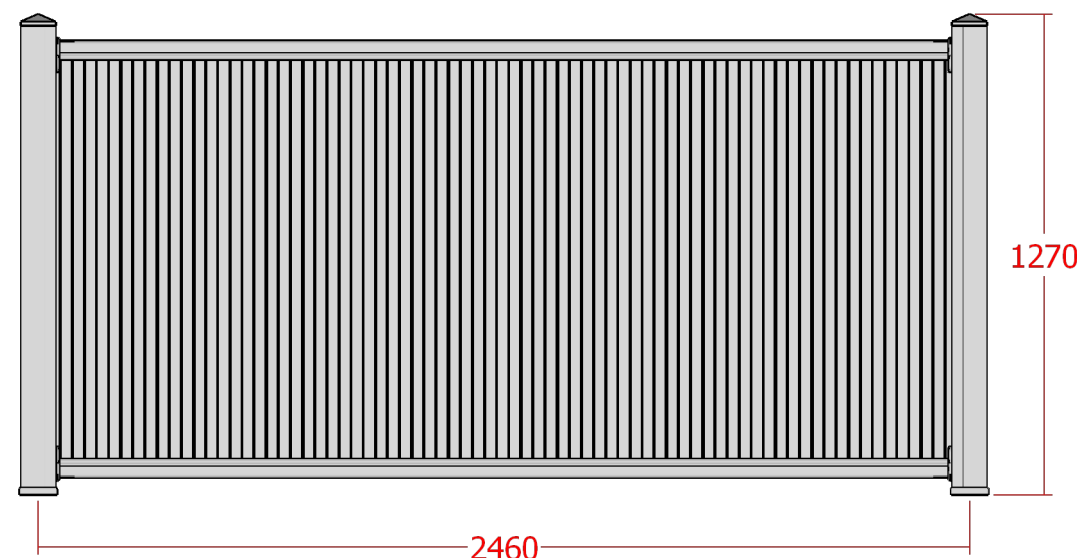


1200 H x 2400 W FENCE M01

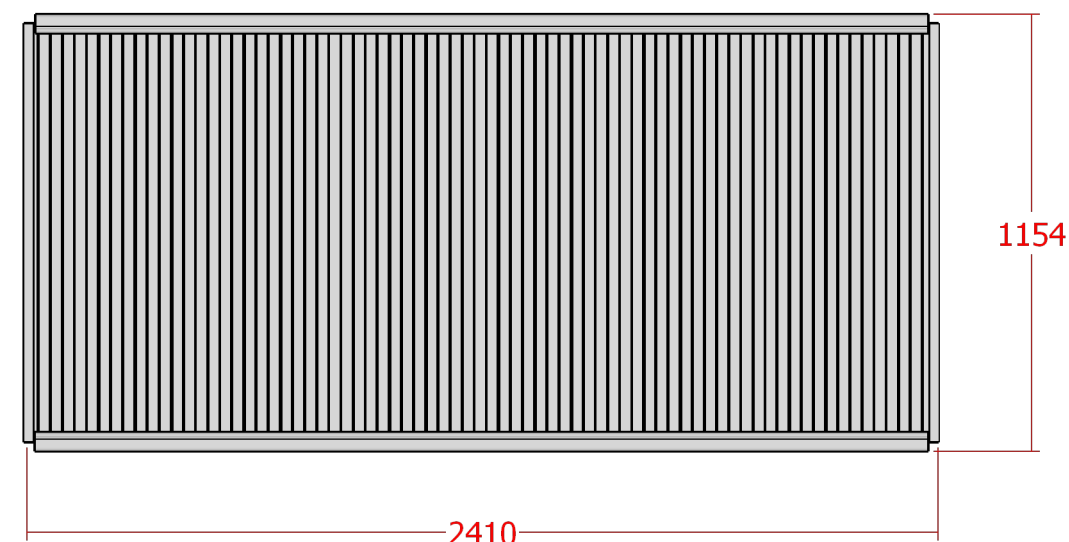


1200 H x 2400 W PANEL M01

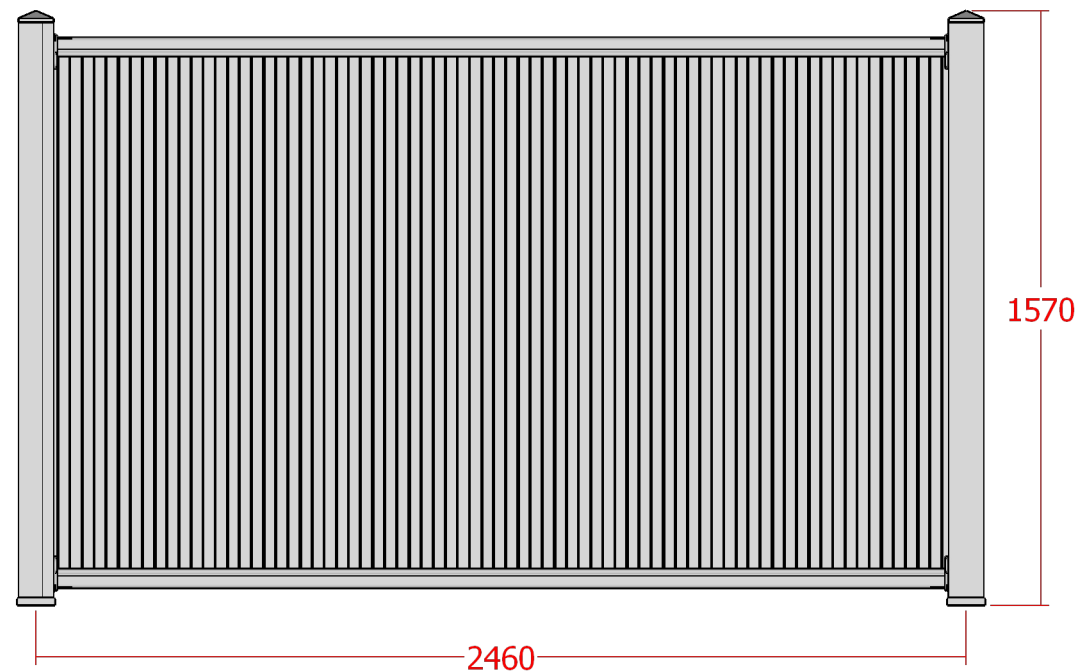


1500 H x 2400 W FENCE M01

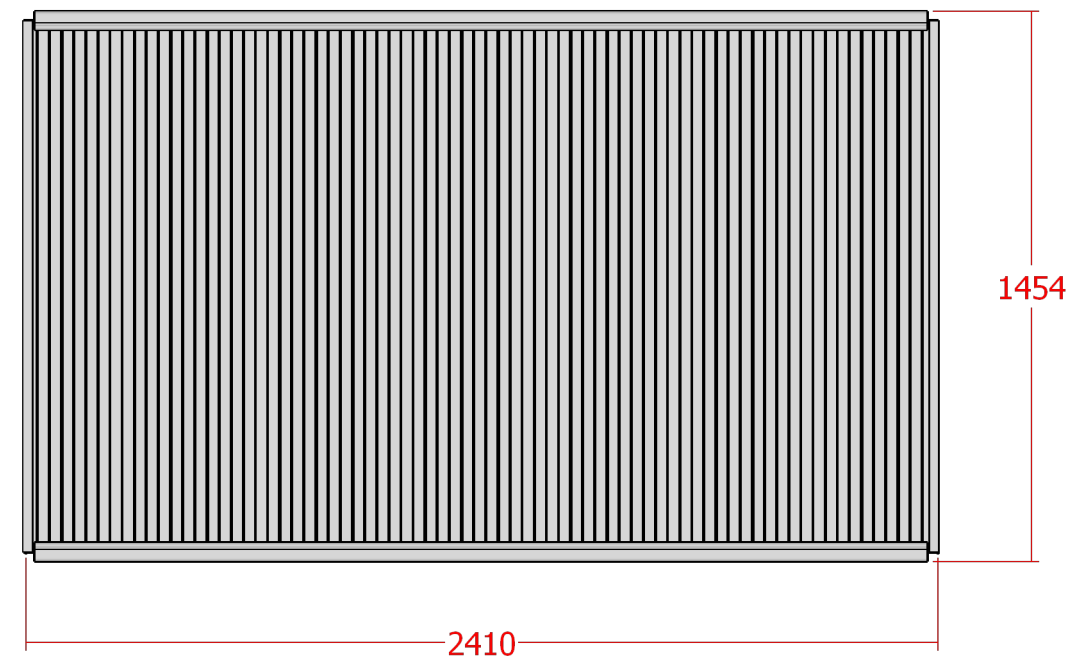

1500 H x 2400 W PANEL M01

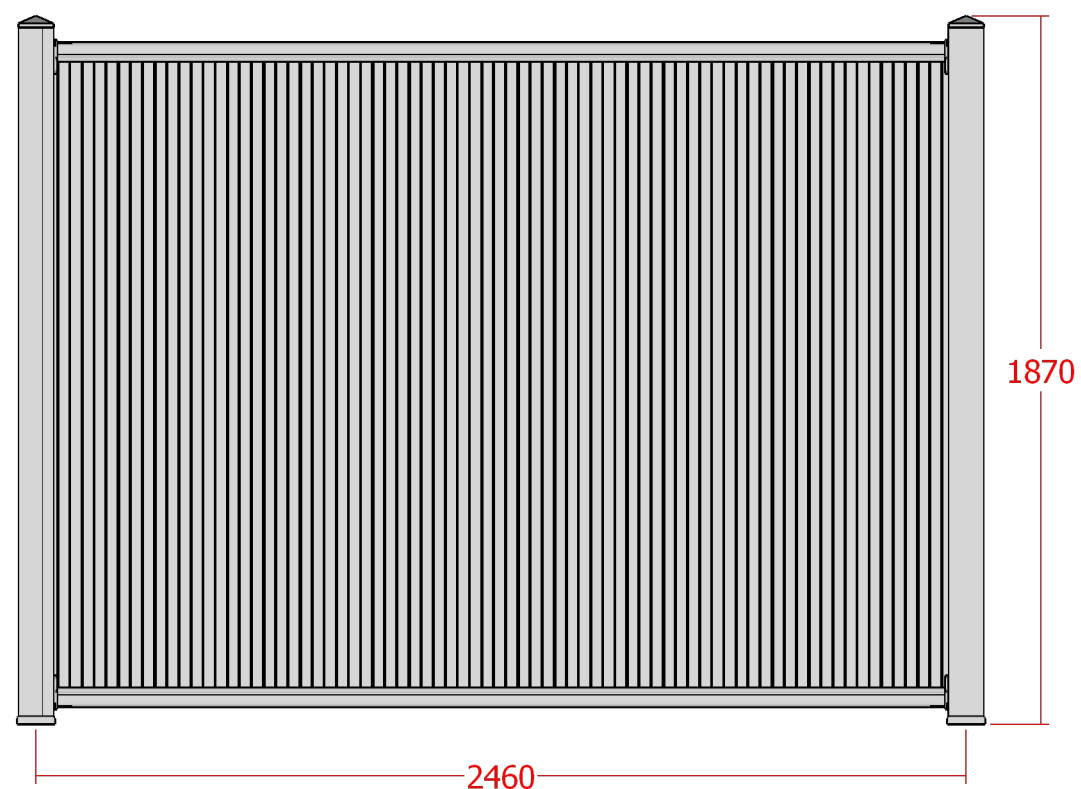


1800 H x 2400 W FENCE M01

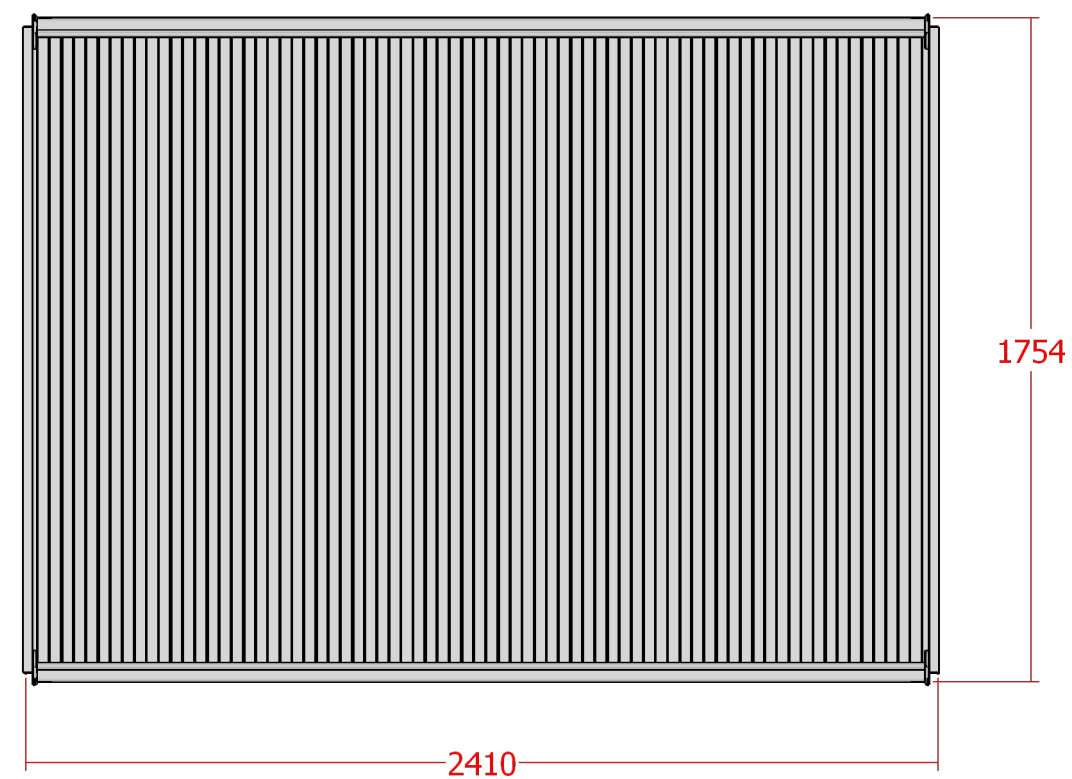

1800 H x 2400 W PANEL M01

INSTALLATION INSTRUCTIONS



ASSEMBLY PROCEDURE FOR FENCE MODEL M01

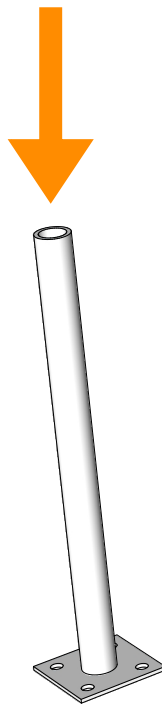

STEP 1:
Determine the distance following site measurement to install the Base Plate

INSTALLATION INSTRUCTIONS



ASSEMBLY PROCEDURE FOR FENCE MODEL M01

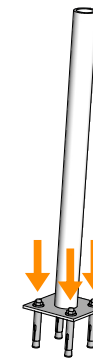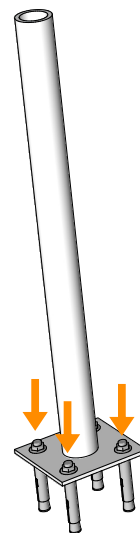

STEP 2:
Secure the Base Plate with M8x120 stainless steel expansion anchors

INSTALLATION INSTRUCTIONS



ASSEMBLY PROCEDURE FOR FENCE MODEL M01

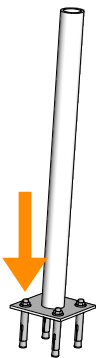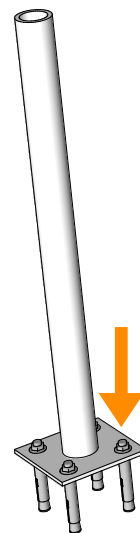

STEP 3:
Install the Bottom Cap

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

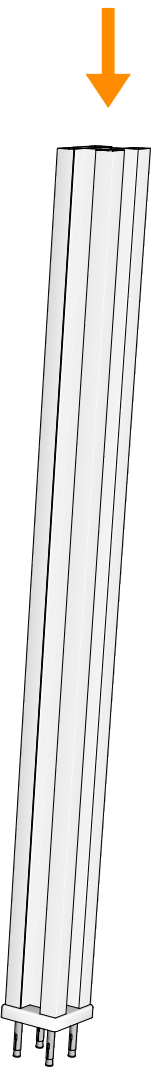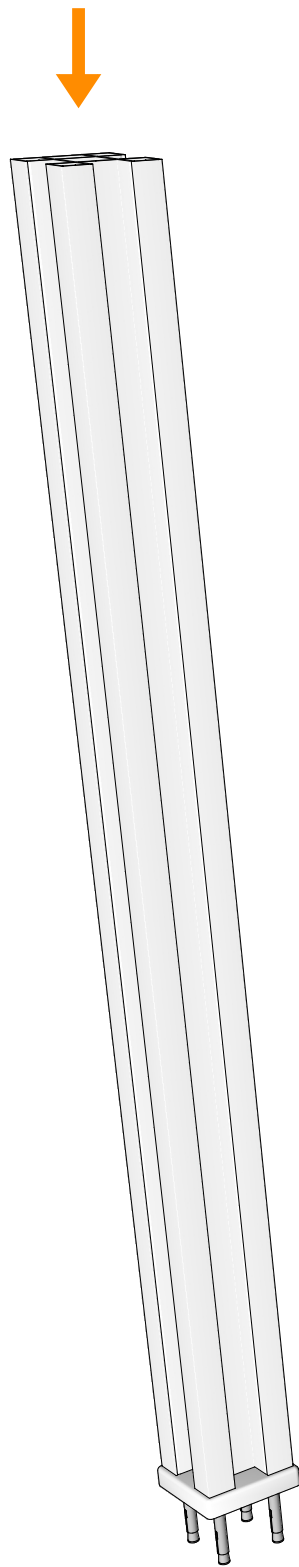

STEP 4:
Install the Main Post HR01A into the Base Plate

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

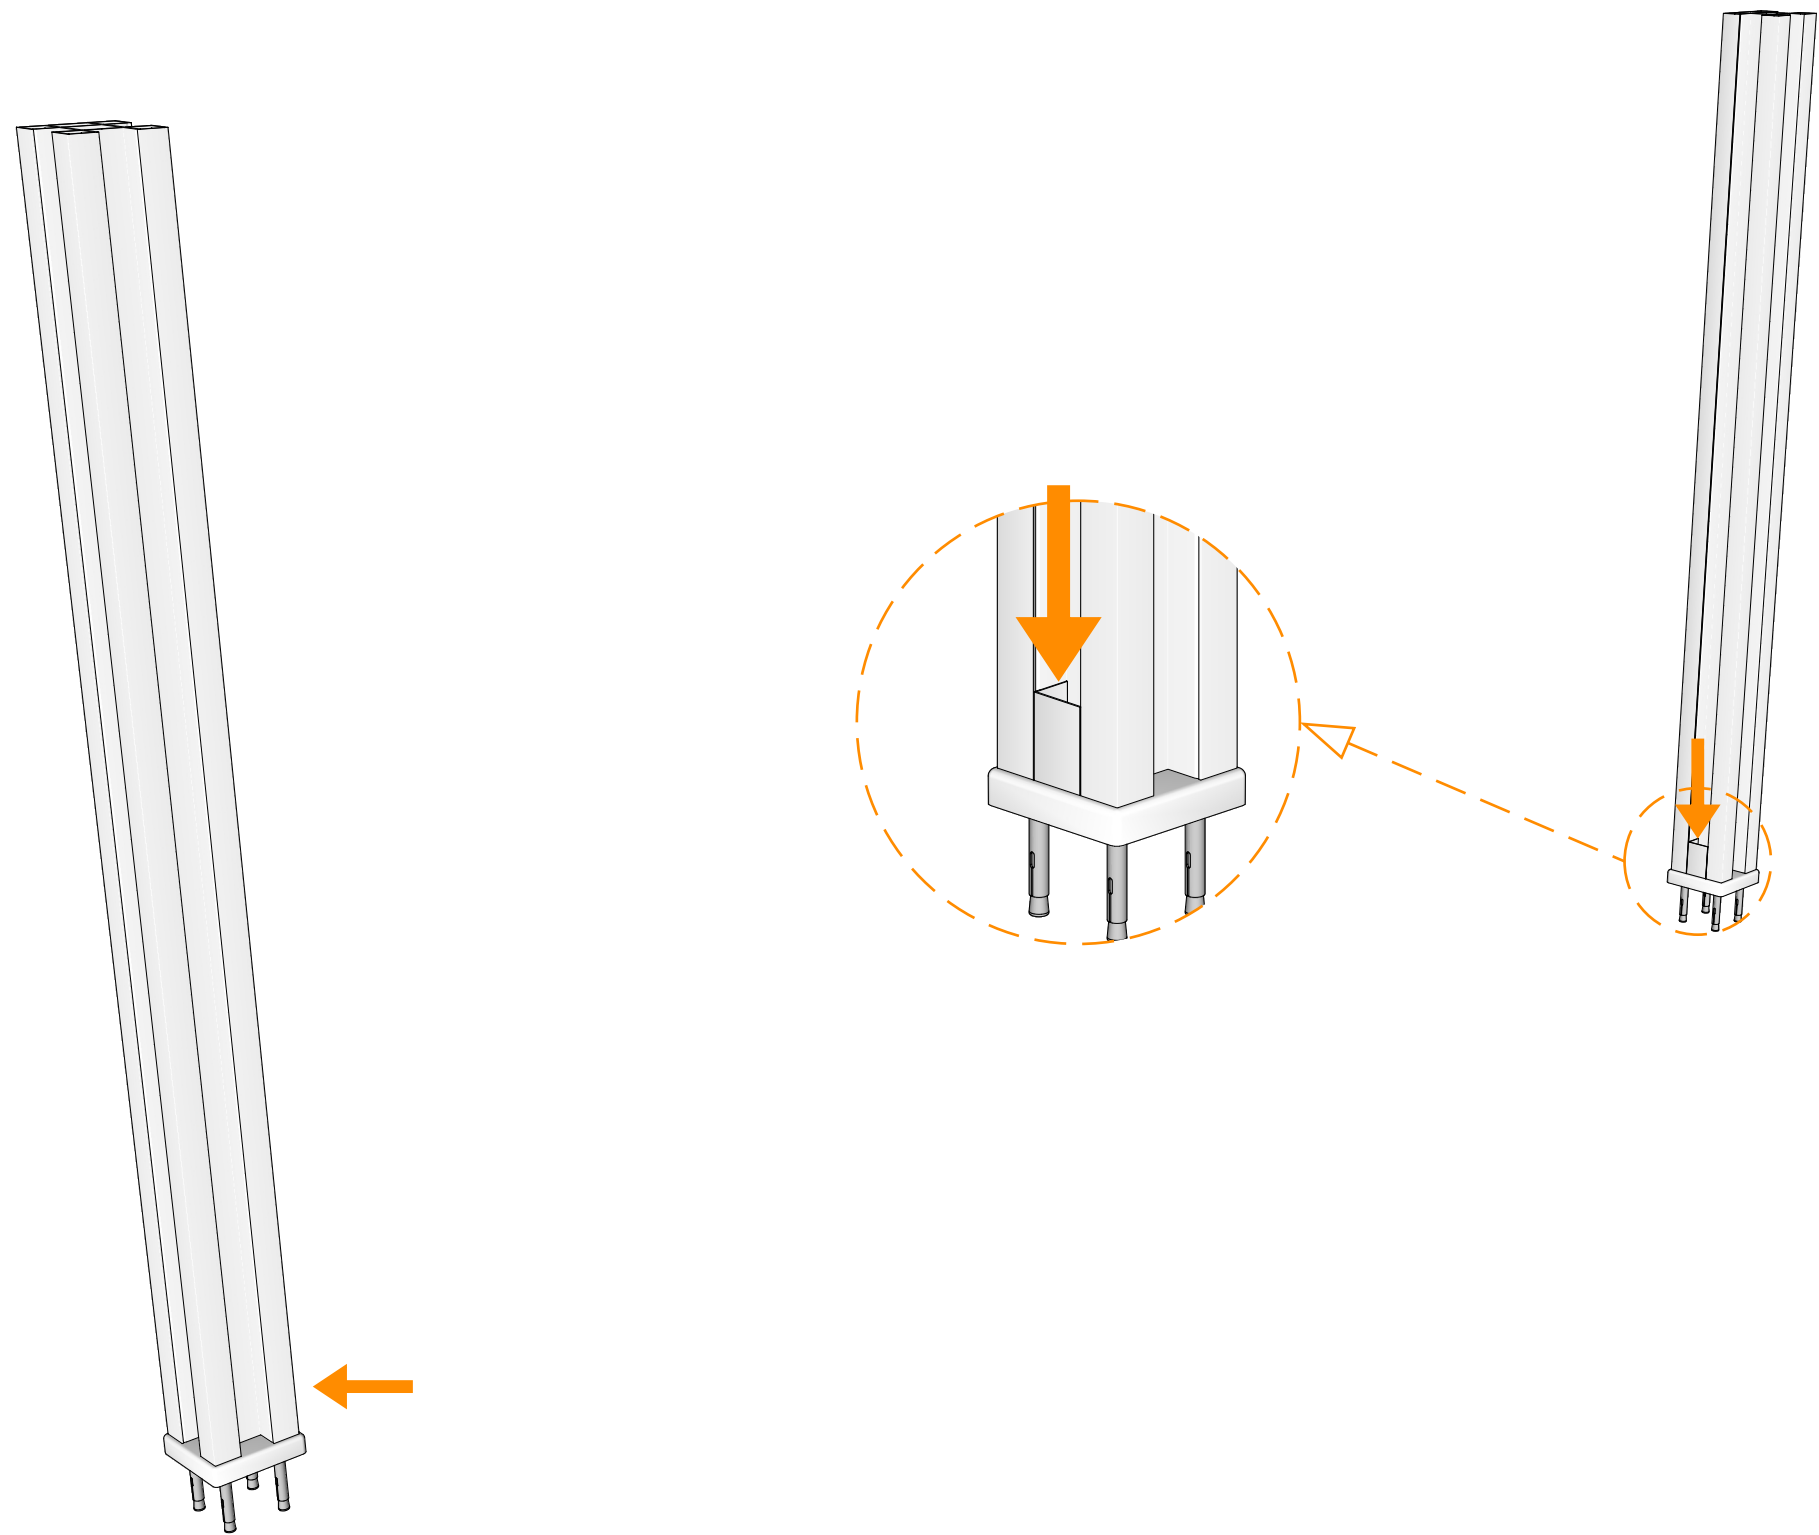

STEP 5:
Install HR04A into the Main Post HR01A

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

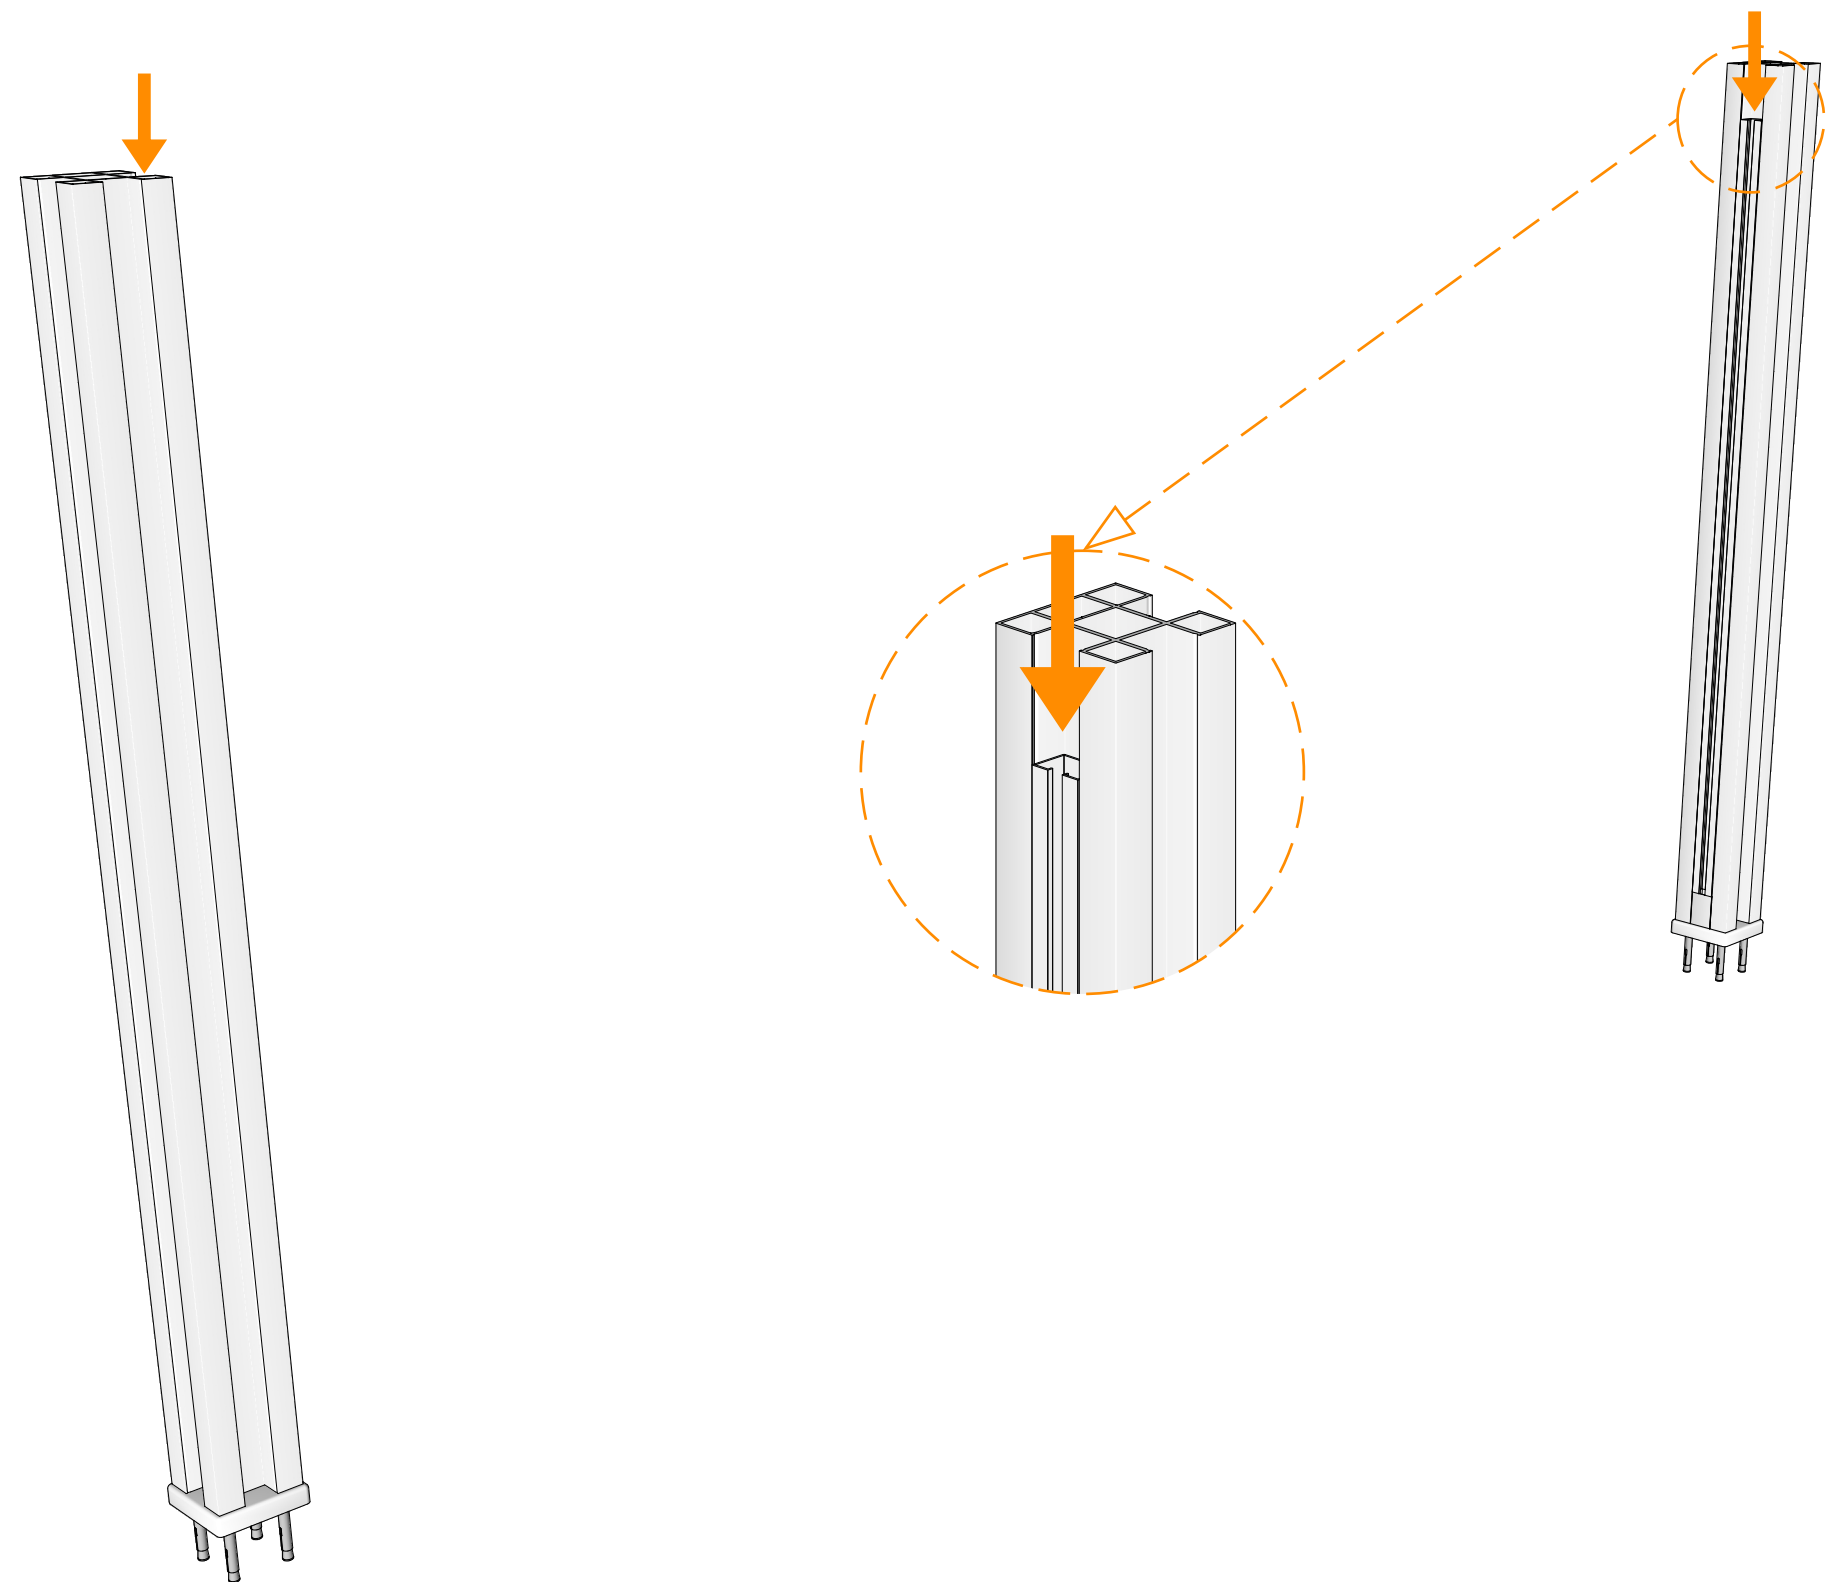

STEP 6:
Install the Clip Strip HR22 into the Main Post HR01A

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

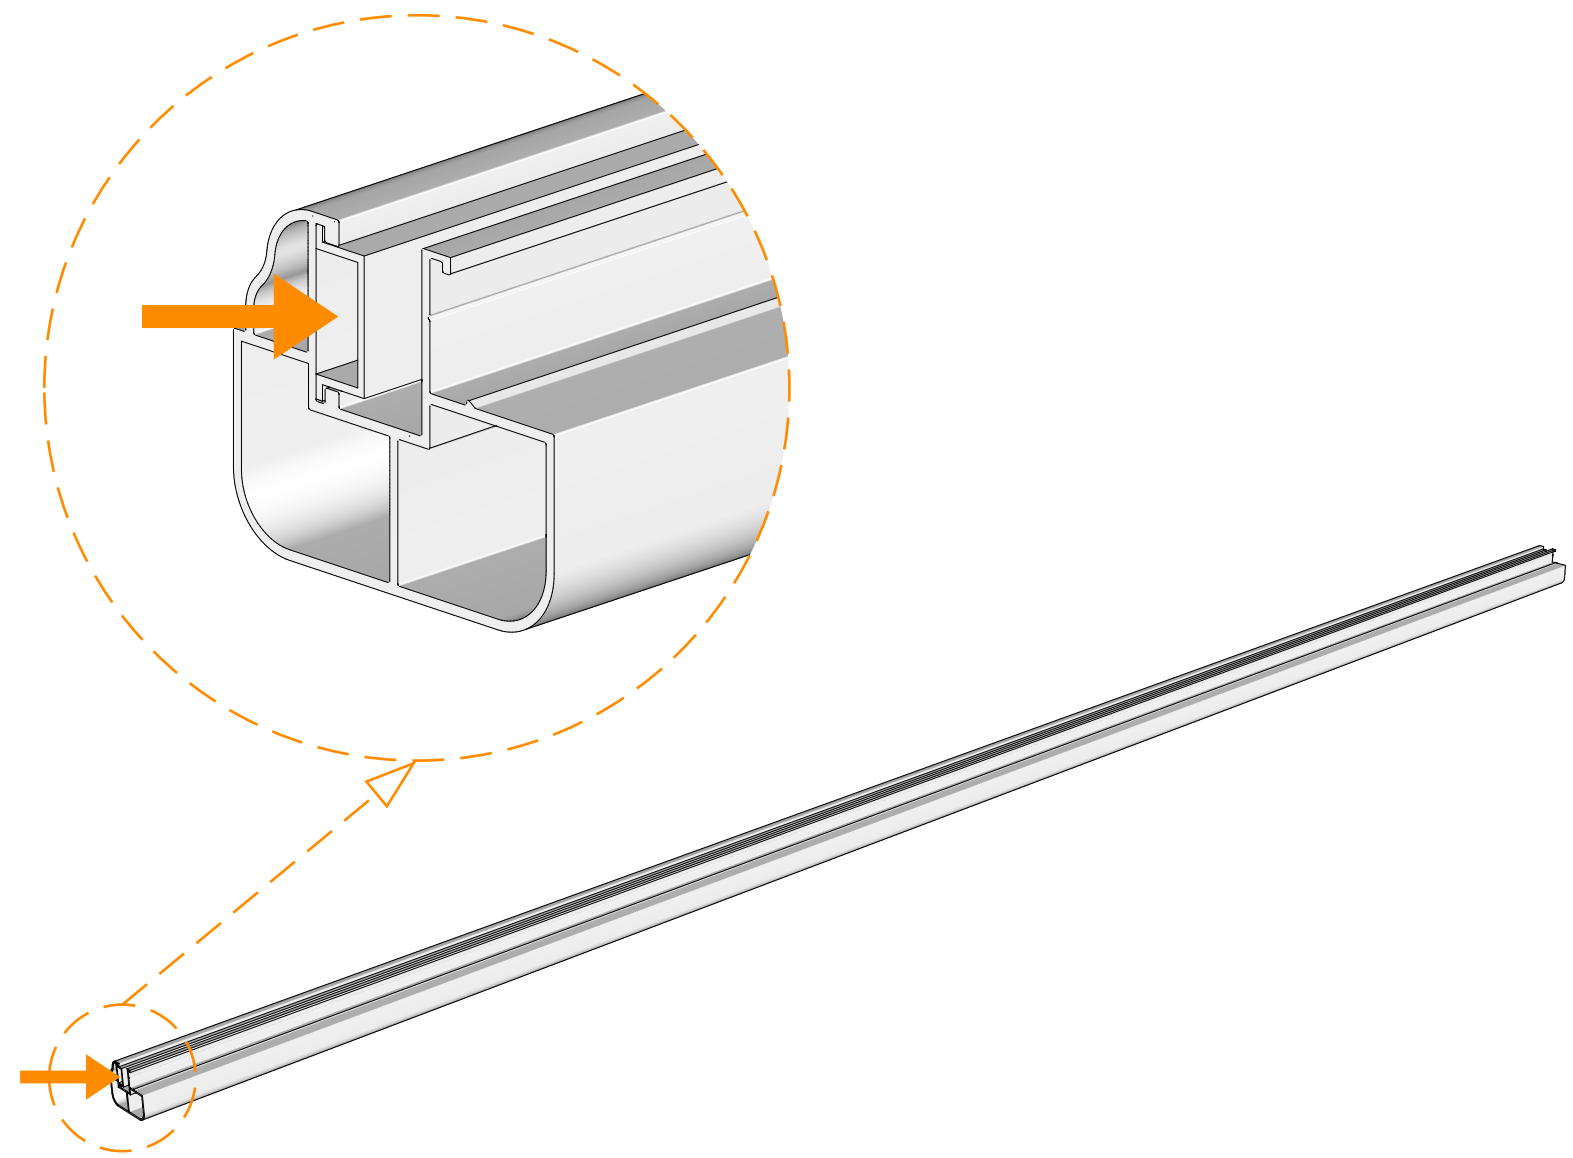

STEP 7:
Install HR04 into the Main Frame HR15

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

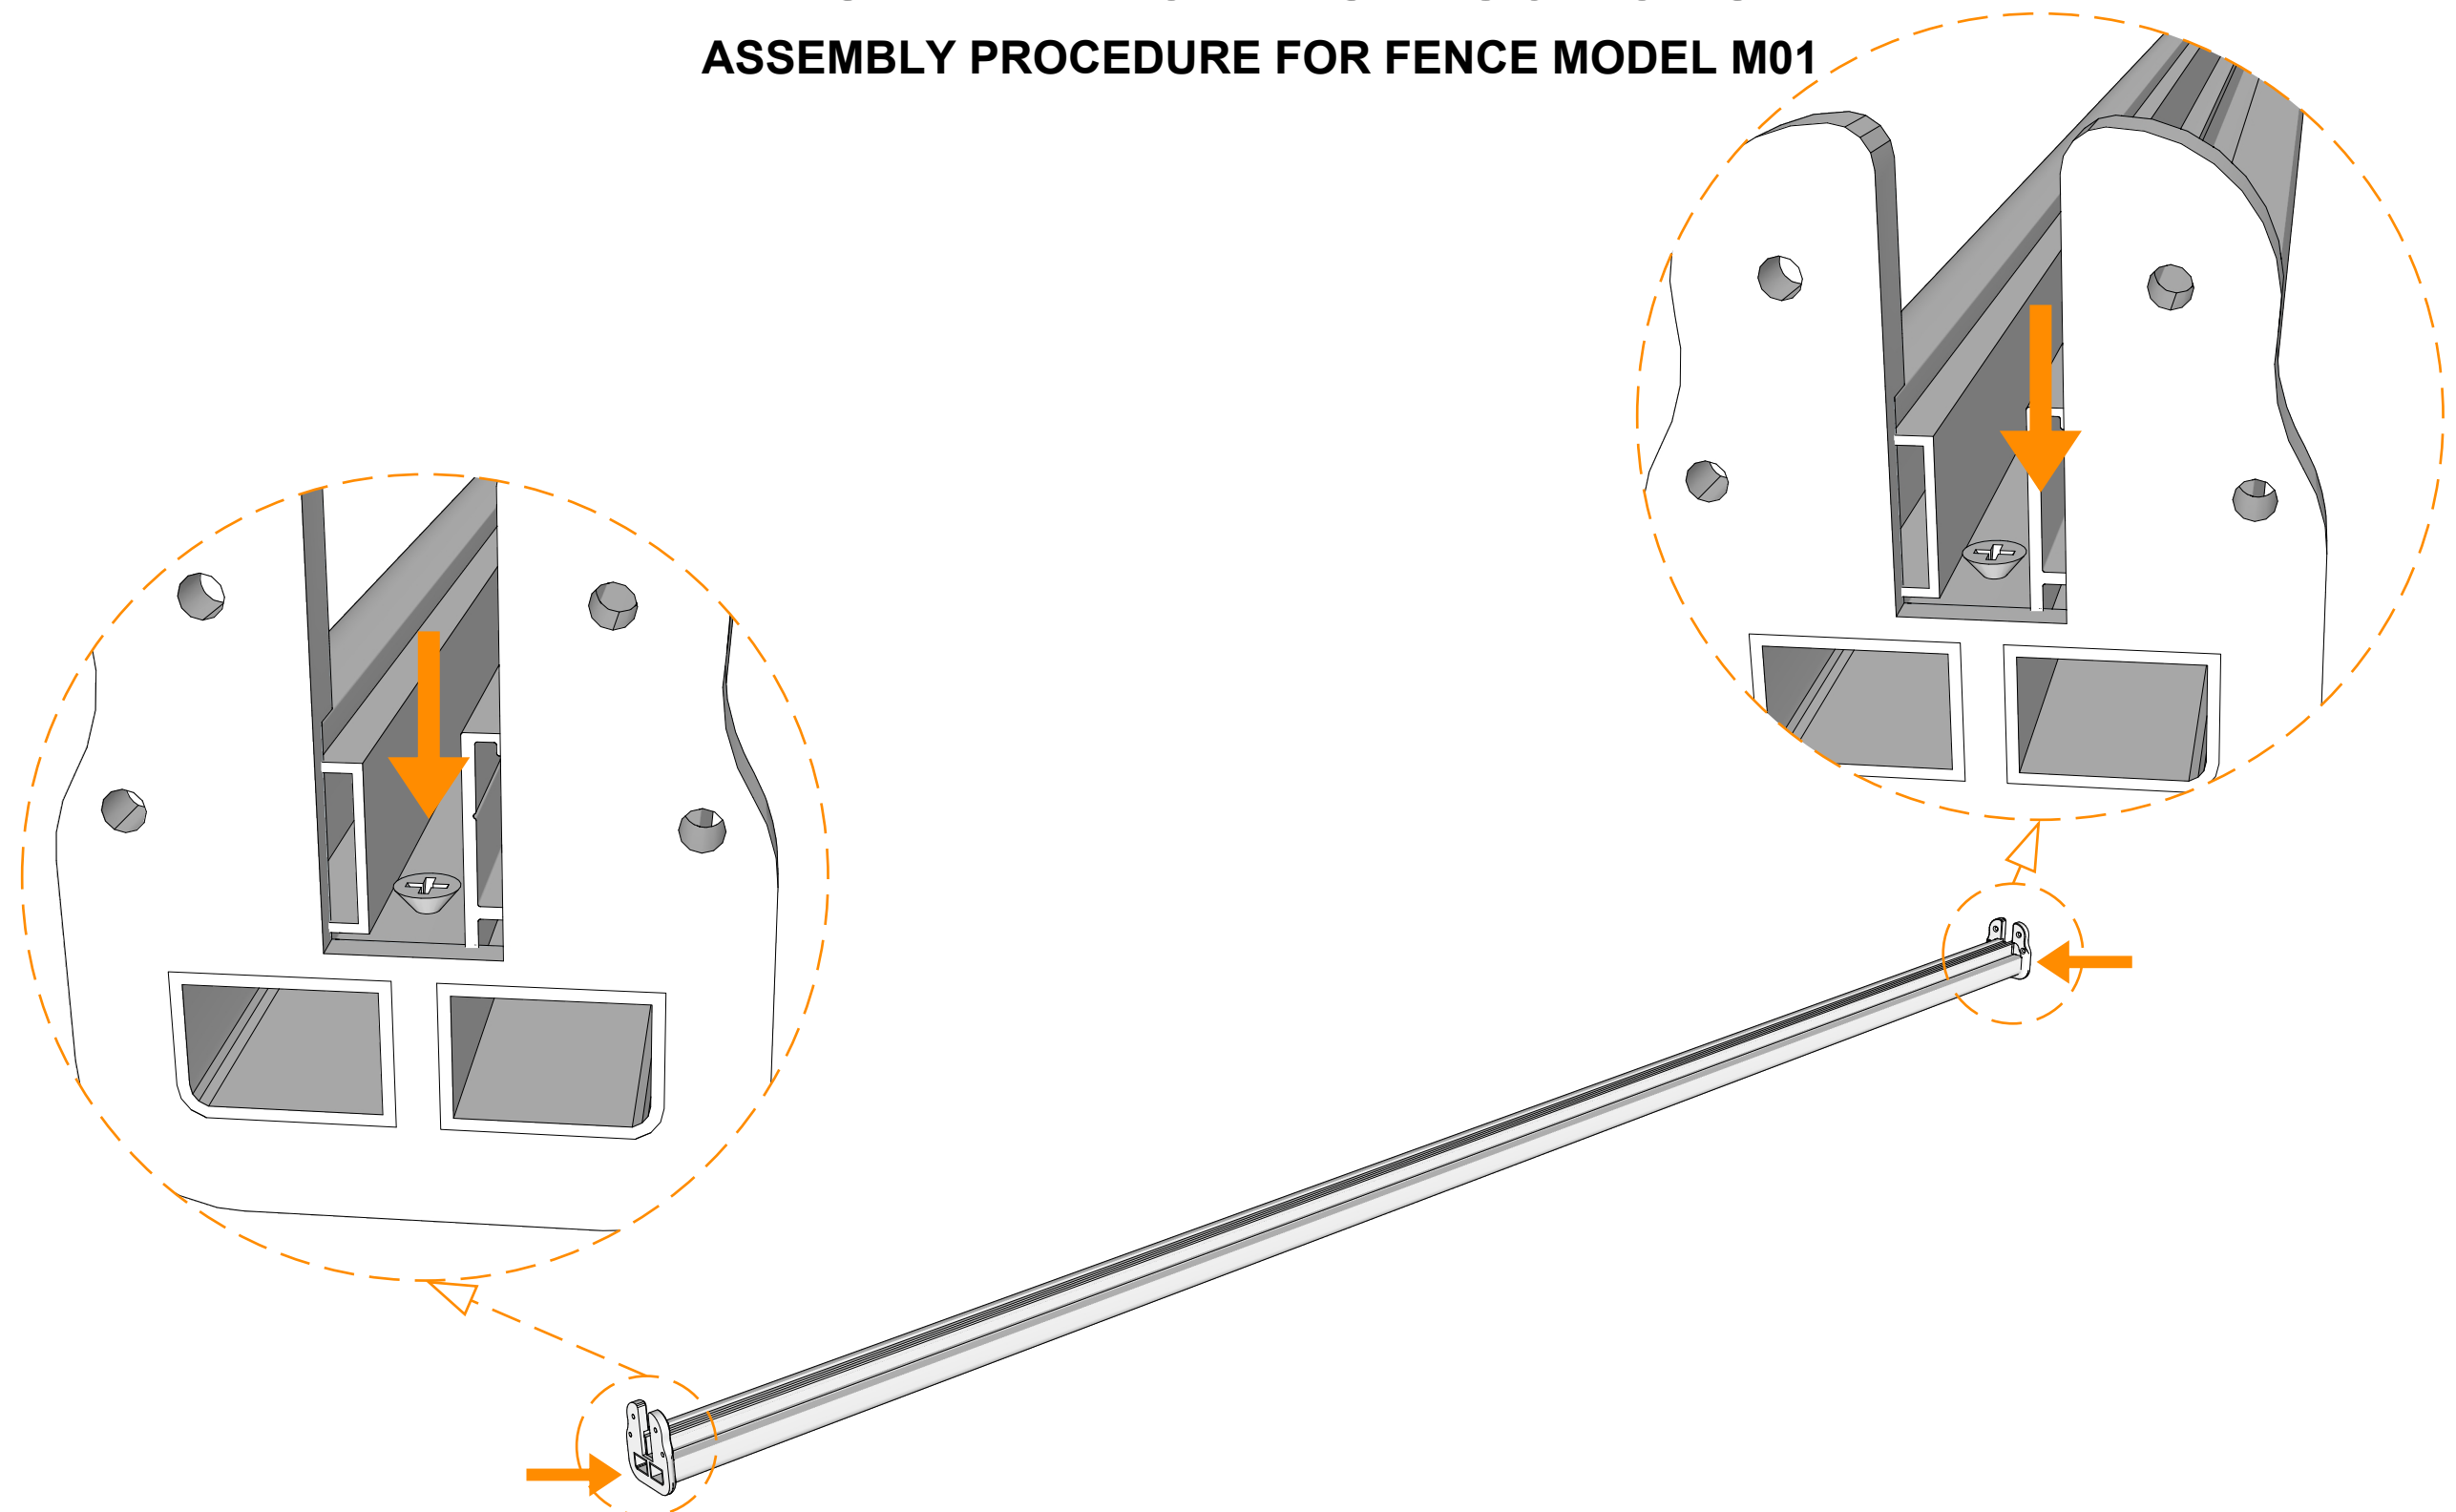

STEP 8:
Fasten HR15 to the Main Post HR01A using Connector Bracket and with Screws

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

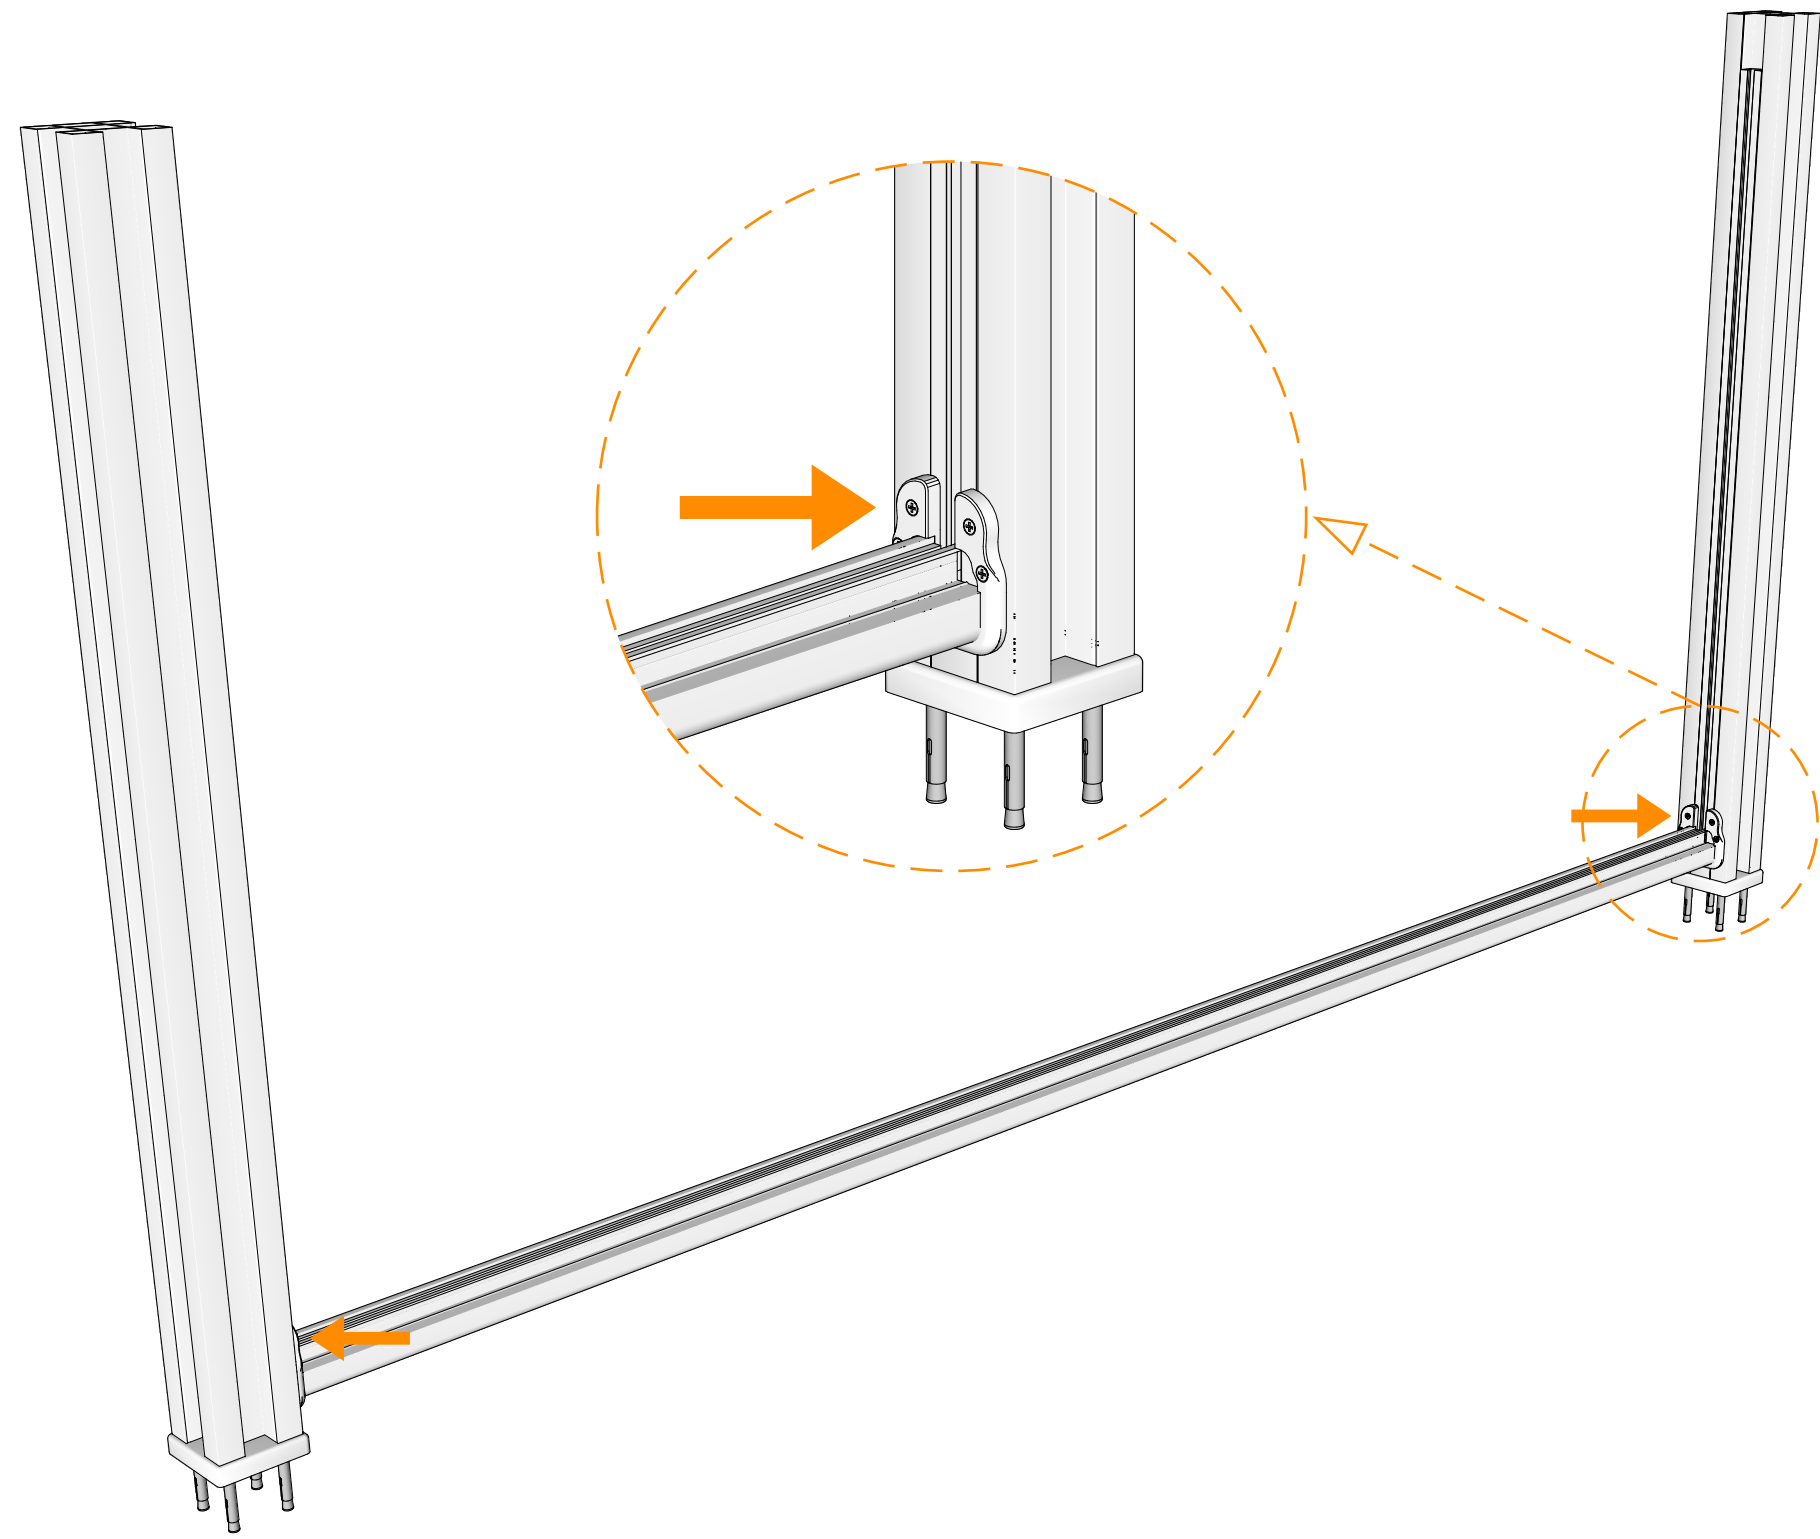

STEP 9:
Install & screw the Bracket-HR15 | HR04 assembly to the bottom of HR01A.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

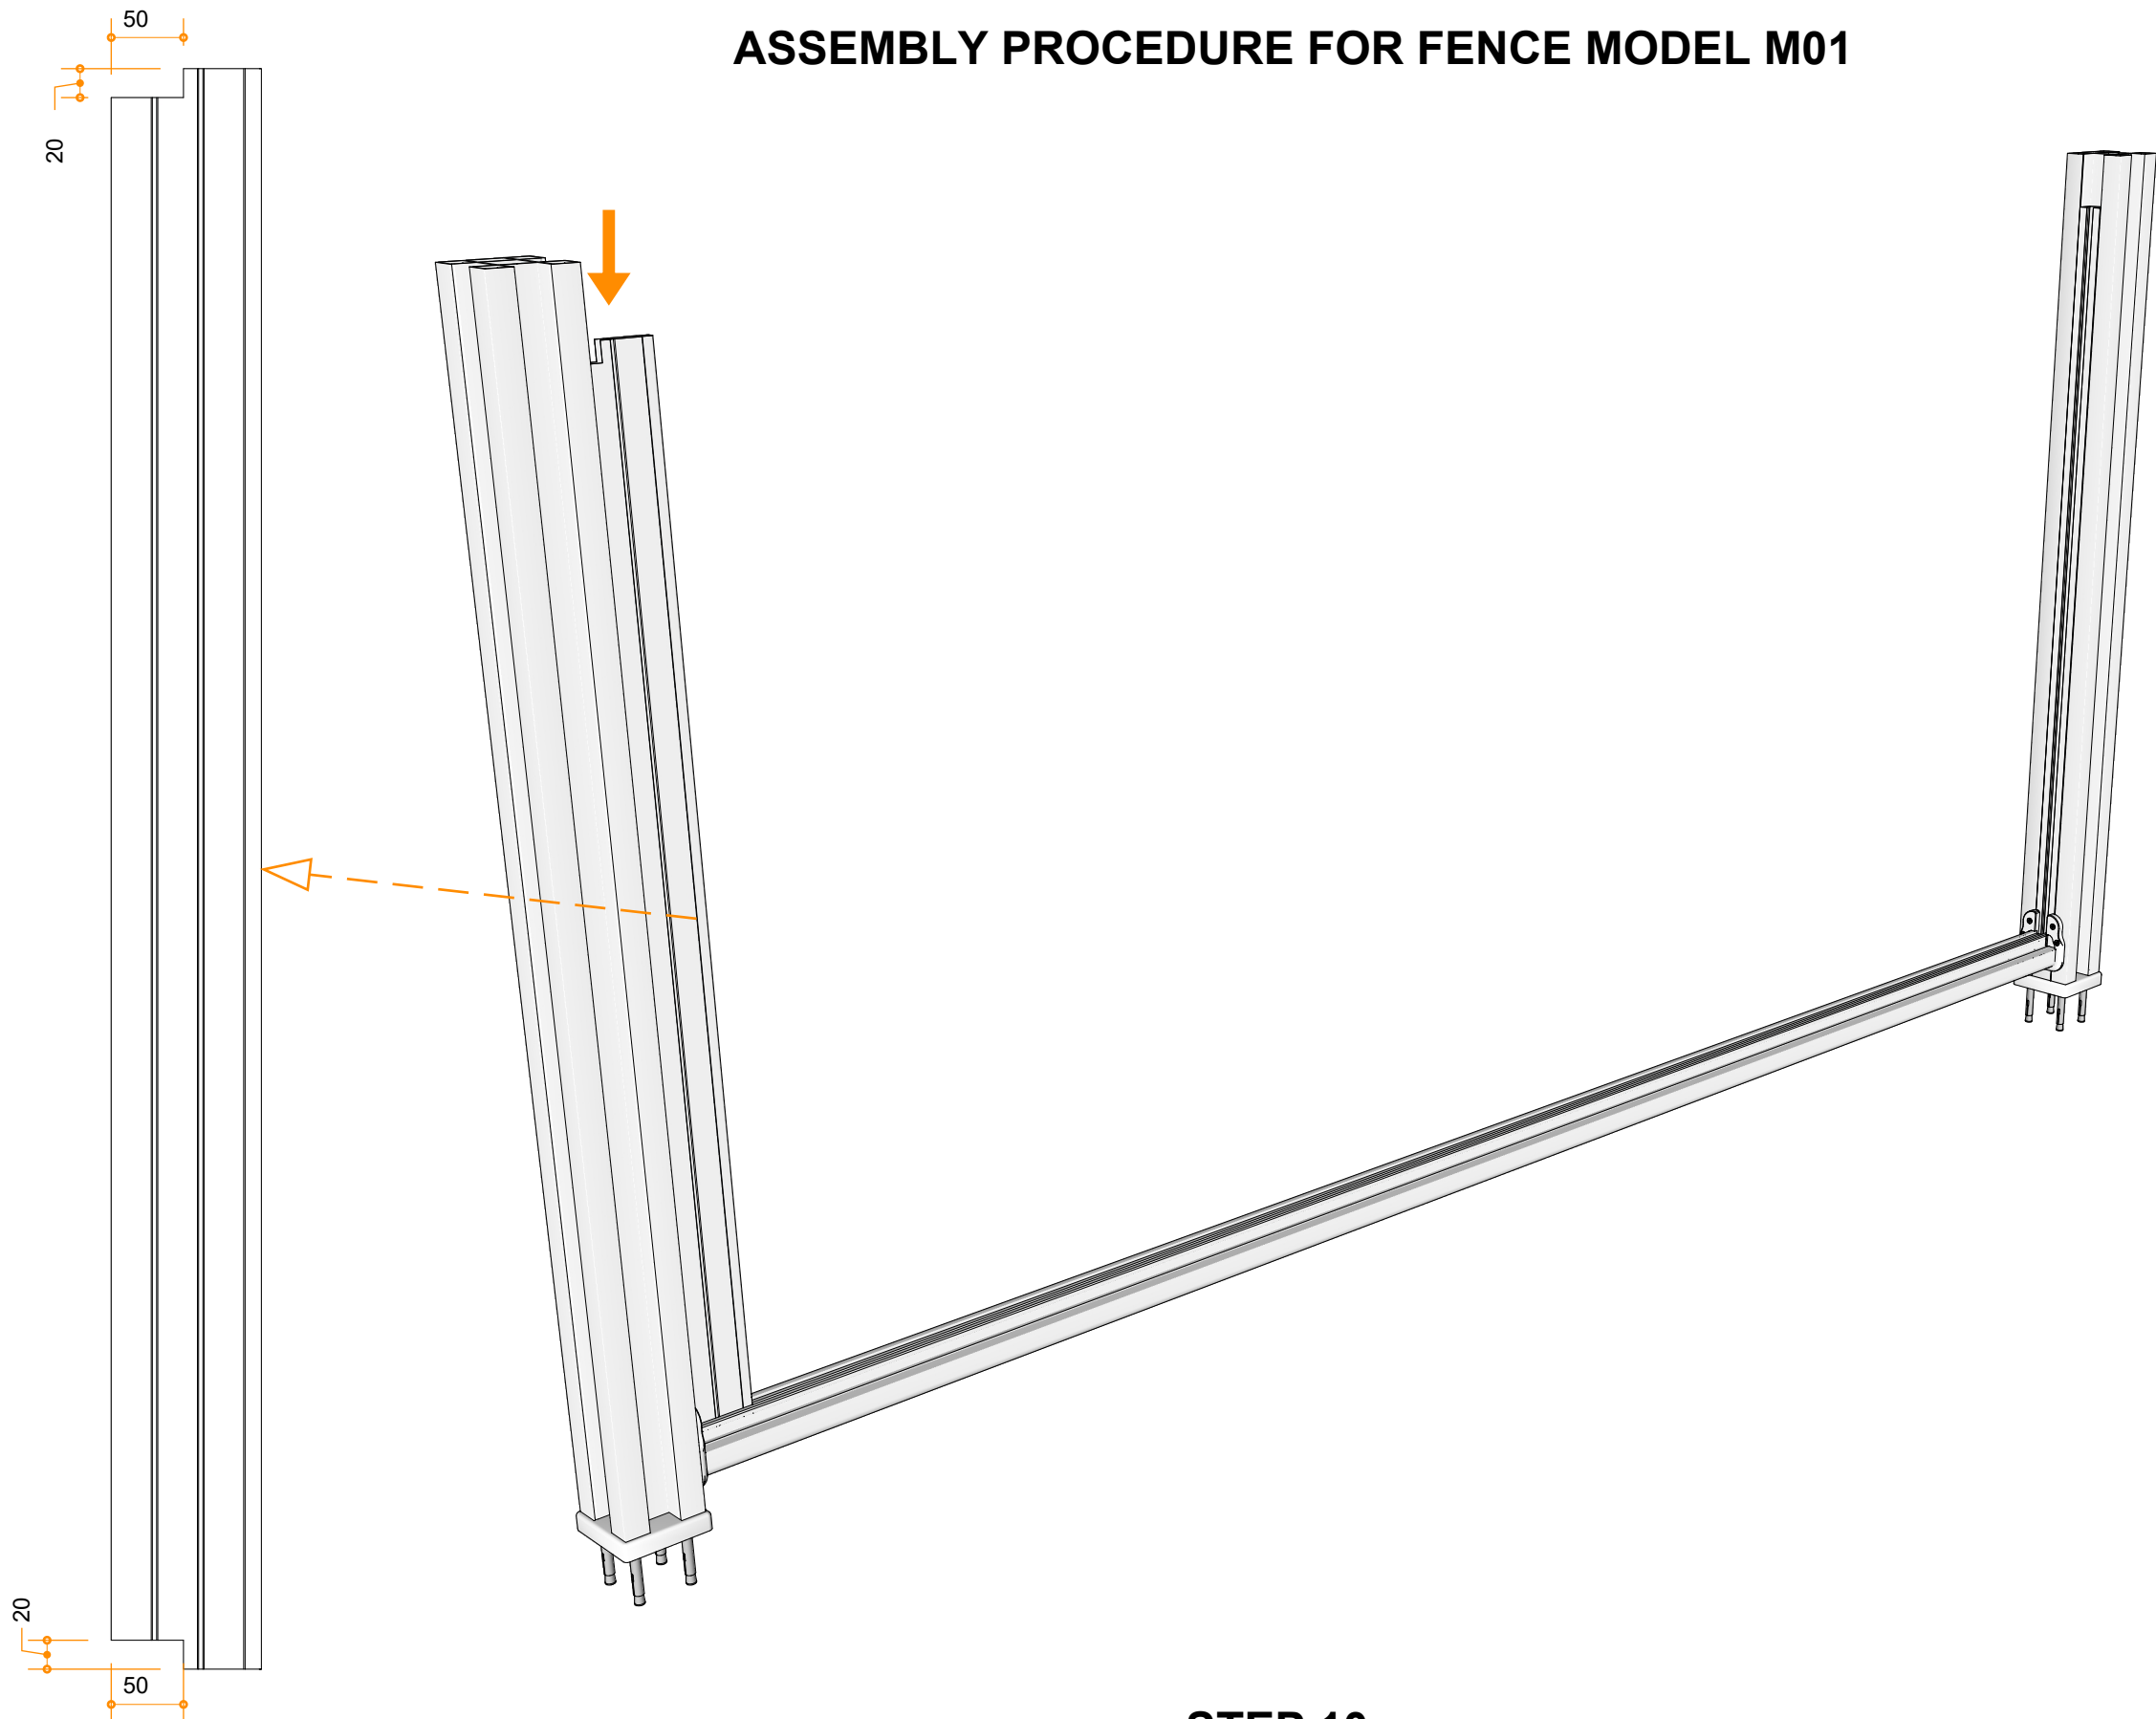

STEP 10:
Install the Panel 4332S one by one.

INSTALLATION INSTRUCTIONS



ASSEMBLY PROCEDURE FOR FENCE MODEL M01

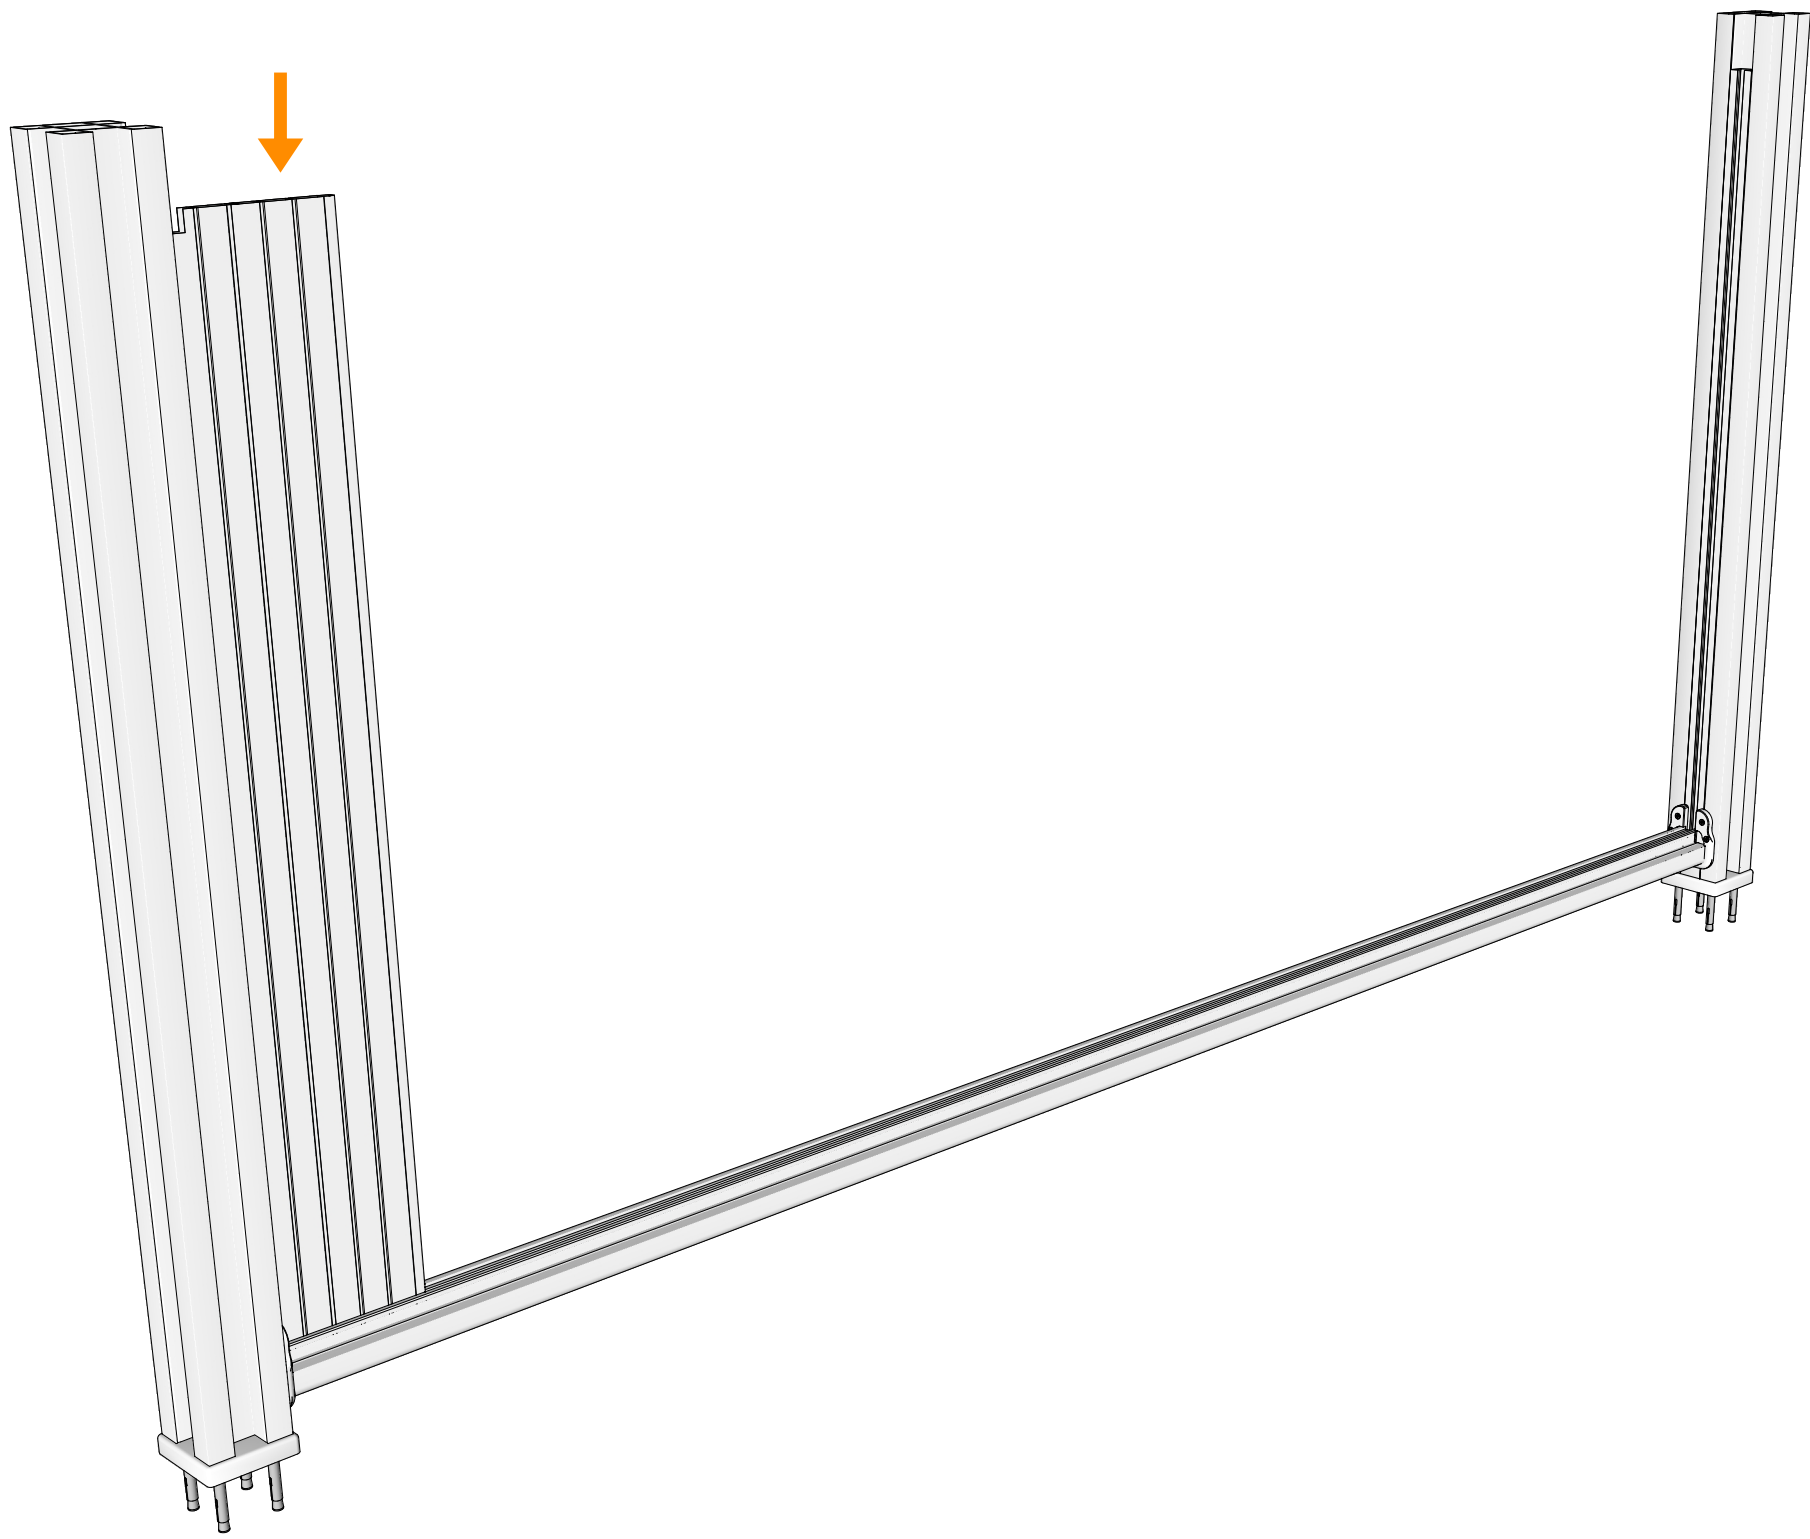

STEP 10:
Install the Panel 4332S one by one.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

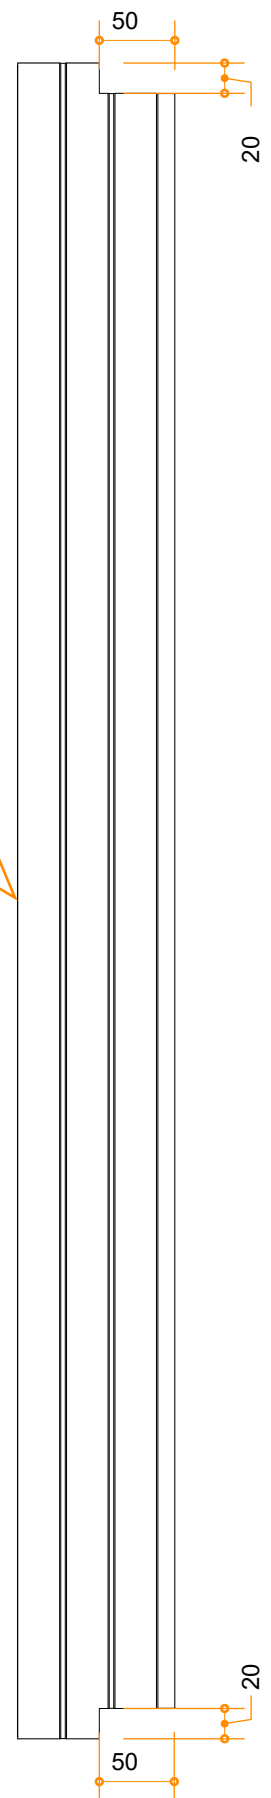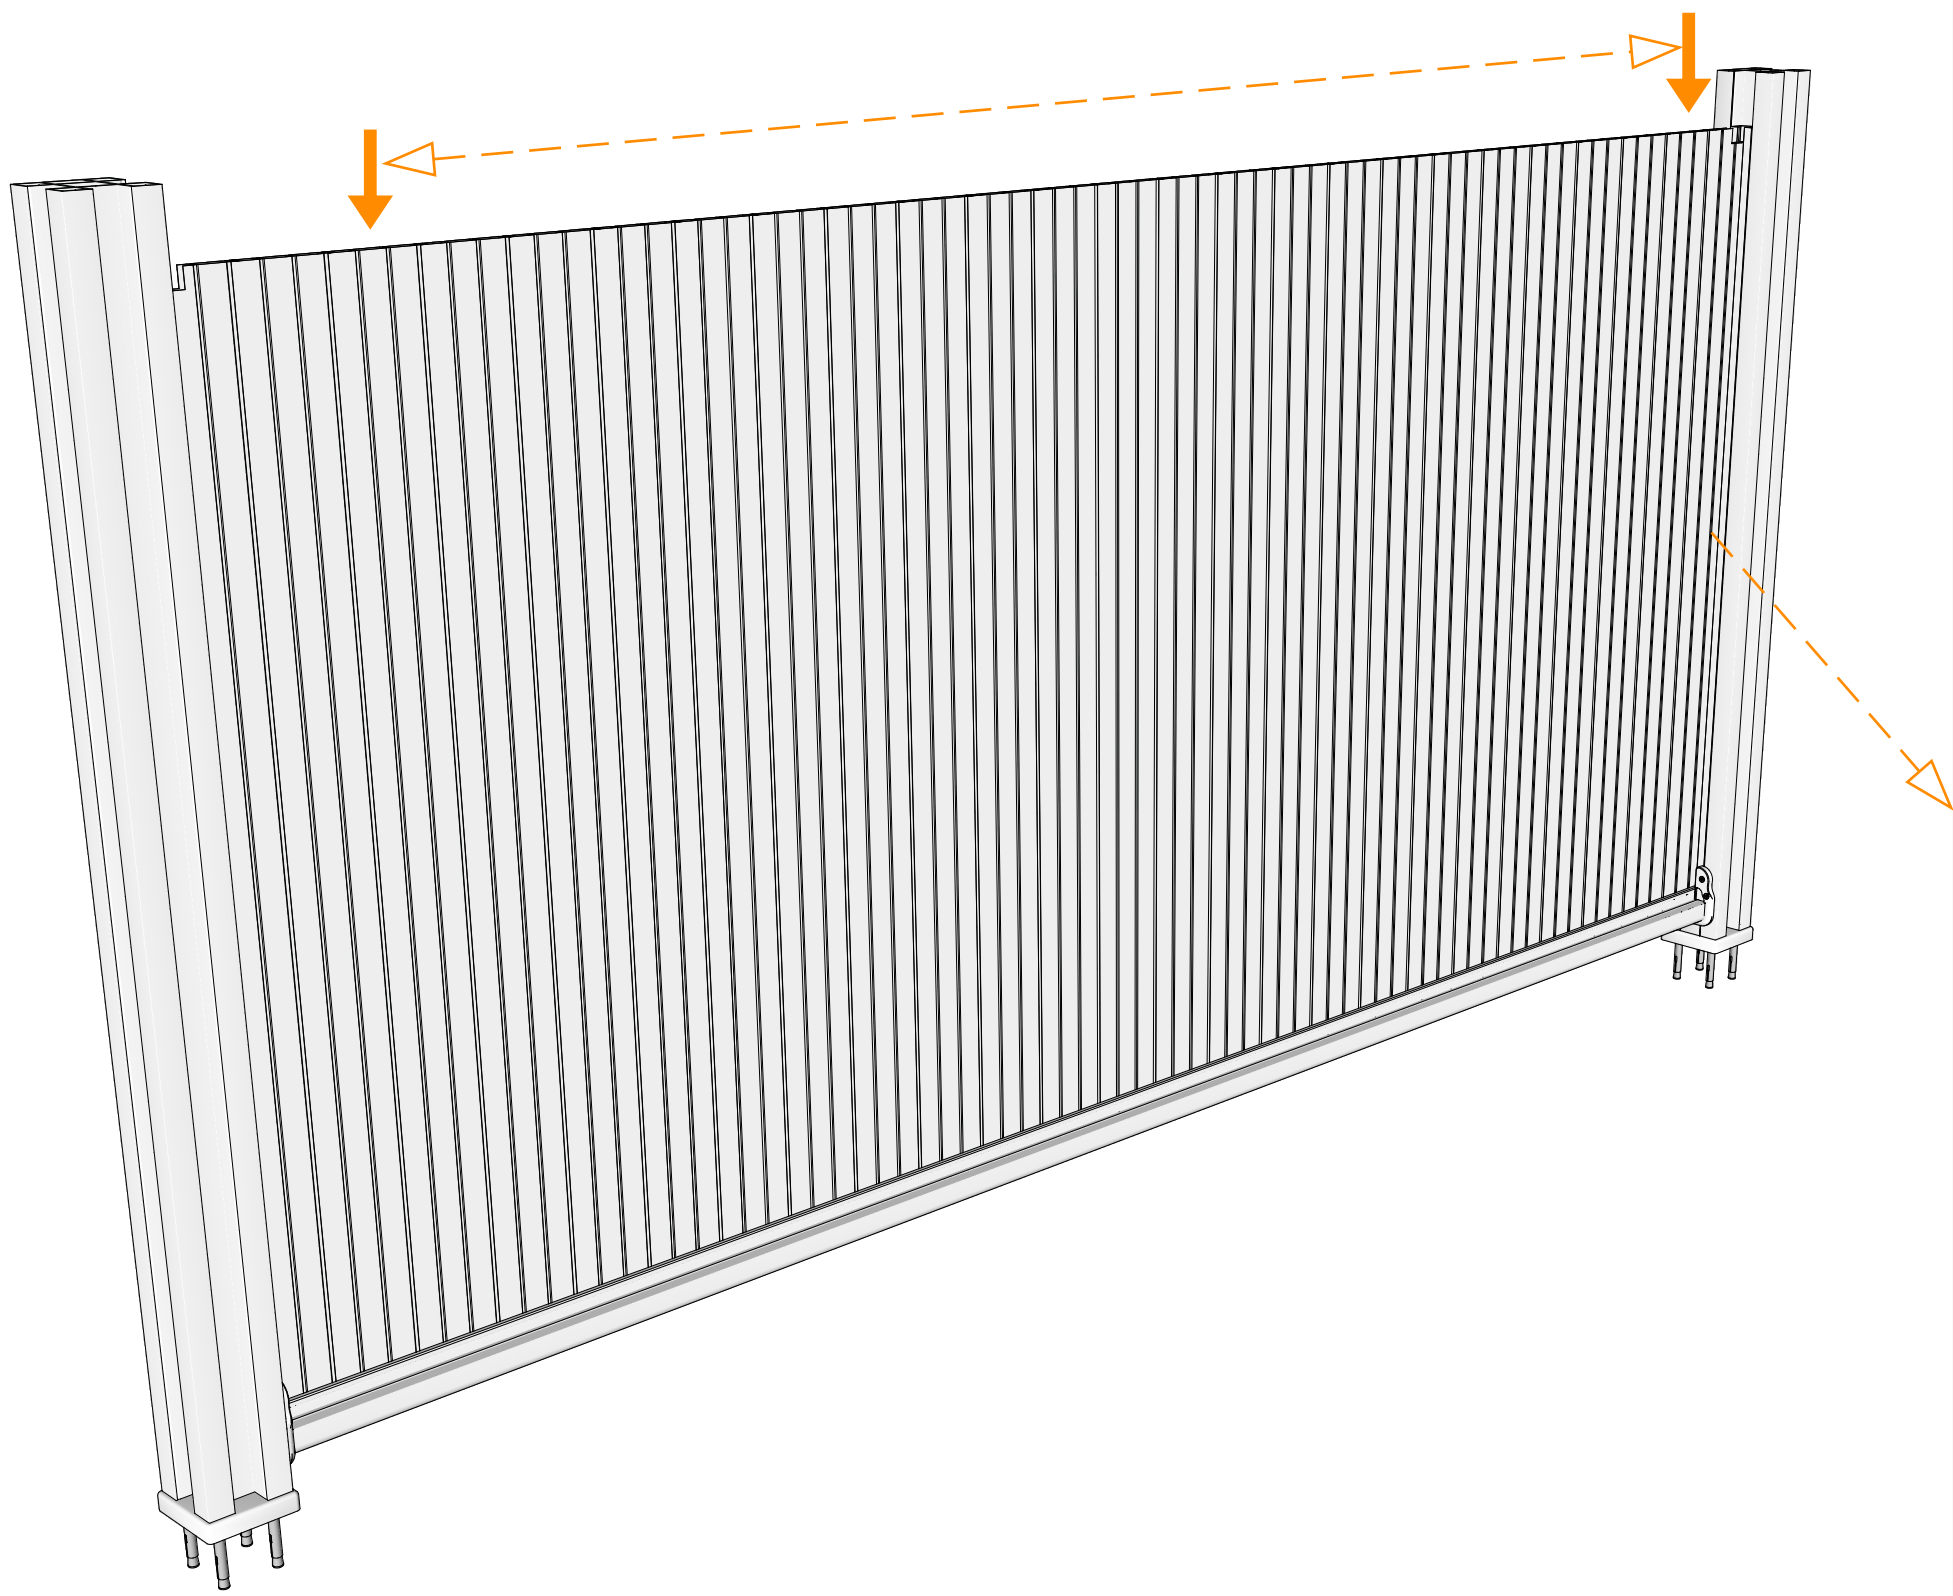

STEP 10:
Install the Panel 4332S one by one.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

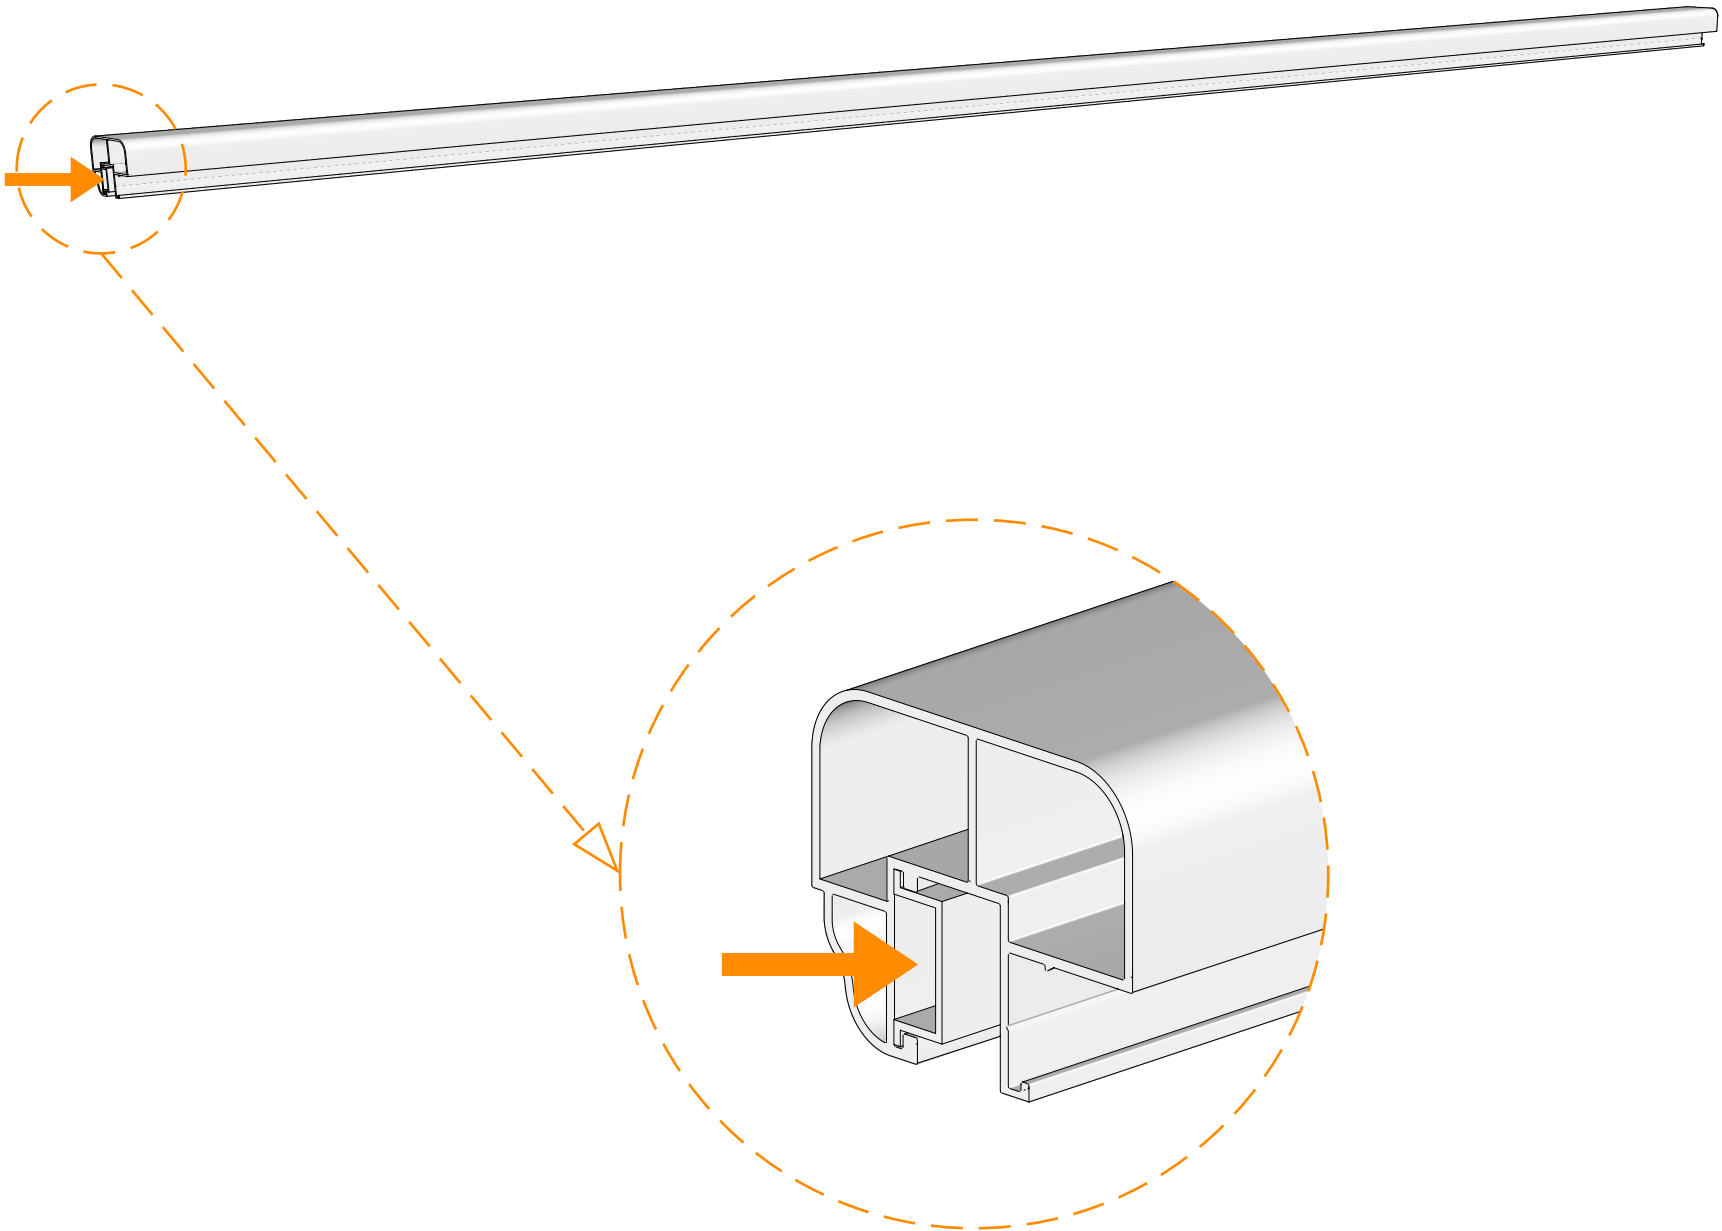

STEP 11:
Install the HR04 - L2361 into the Main Frame HR15

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

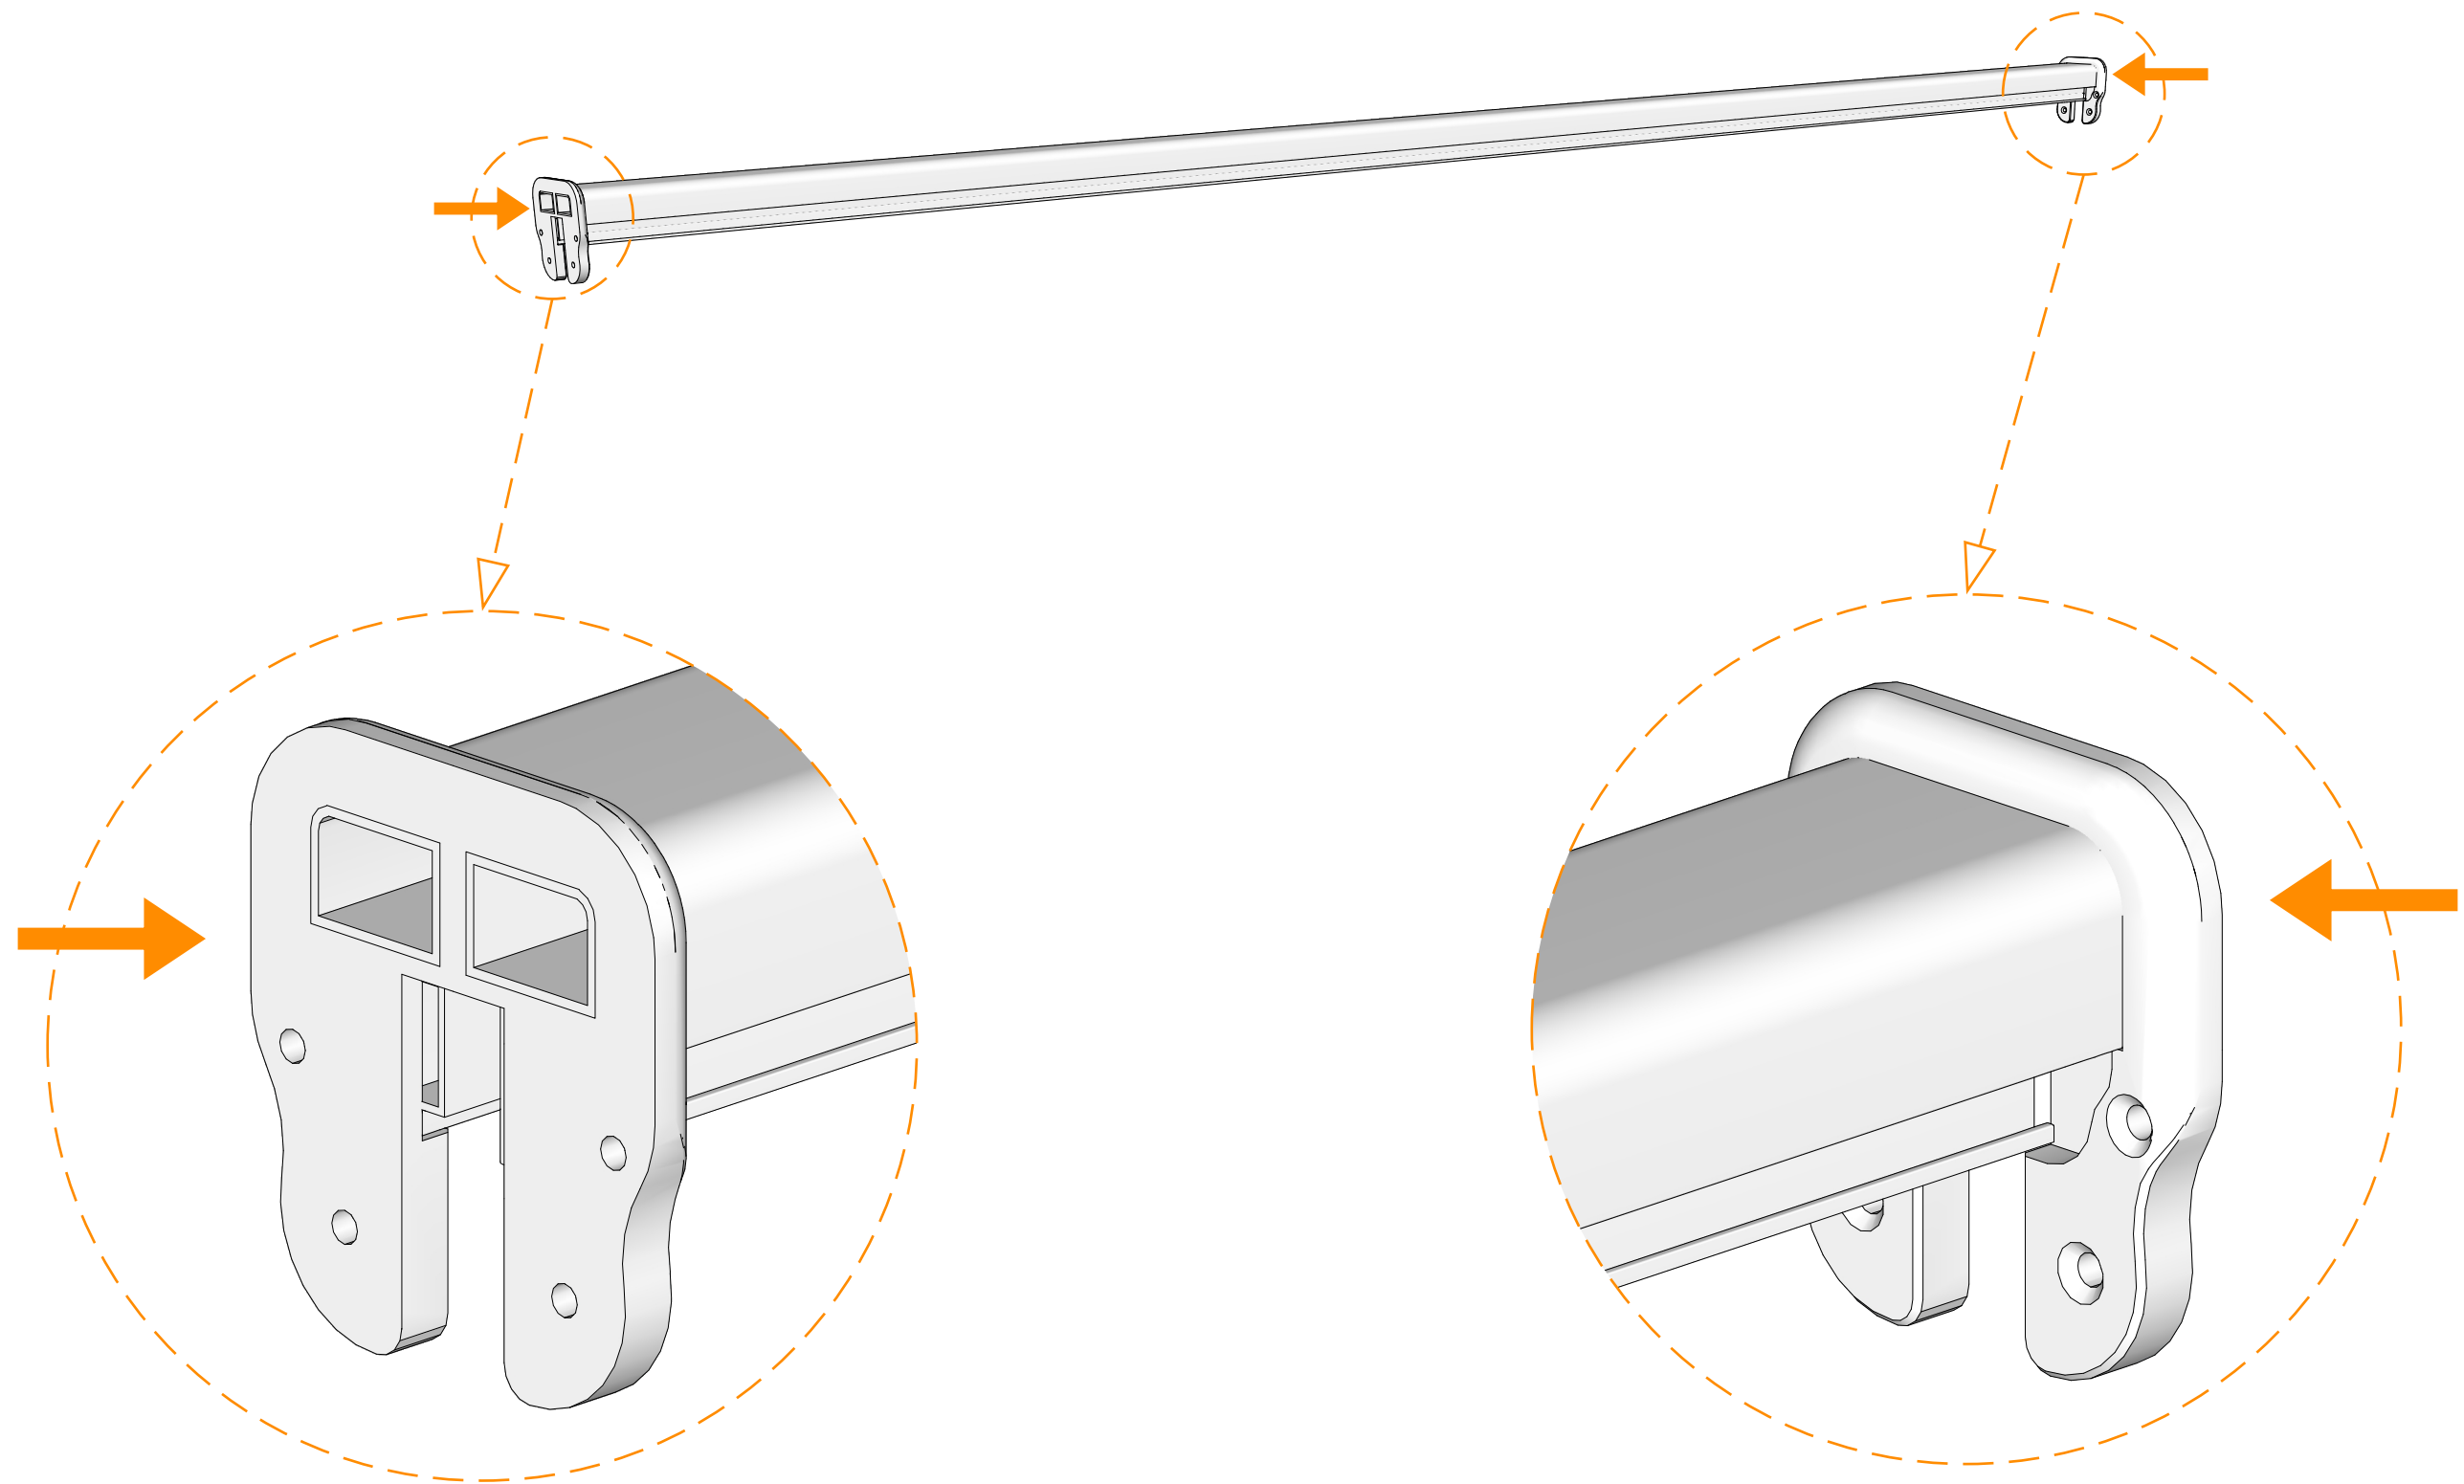

STEP 12:
Fasten HR15 to the Main Post HR01A using Connector Bracket and with Screws


INSTALLATION INSTRUCTIONS

ASSEMBLY PROCEDURE FOR FENCE MODEL M01

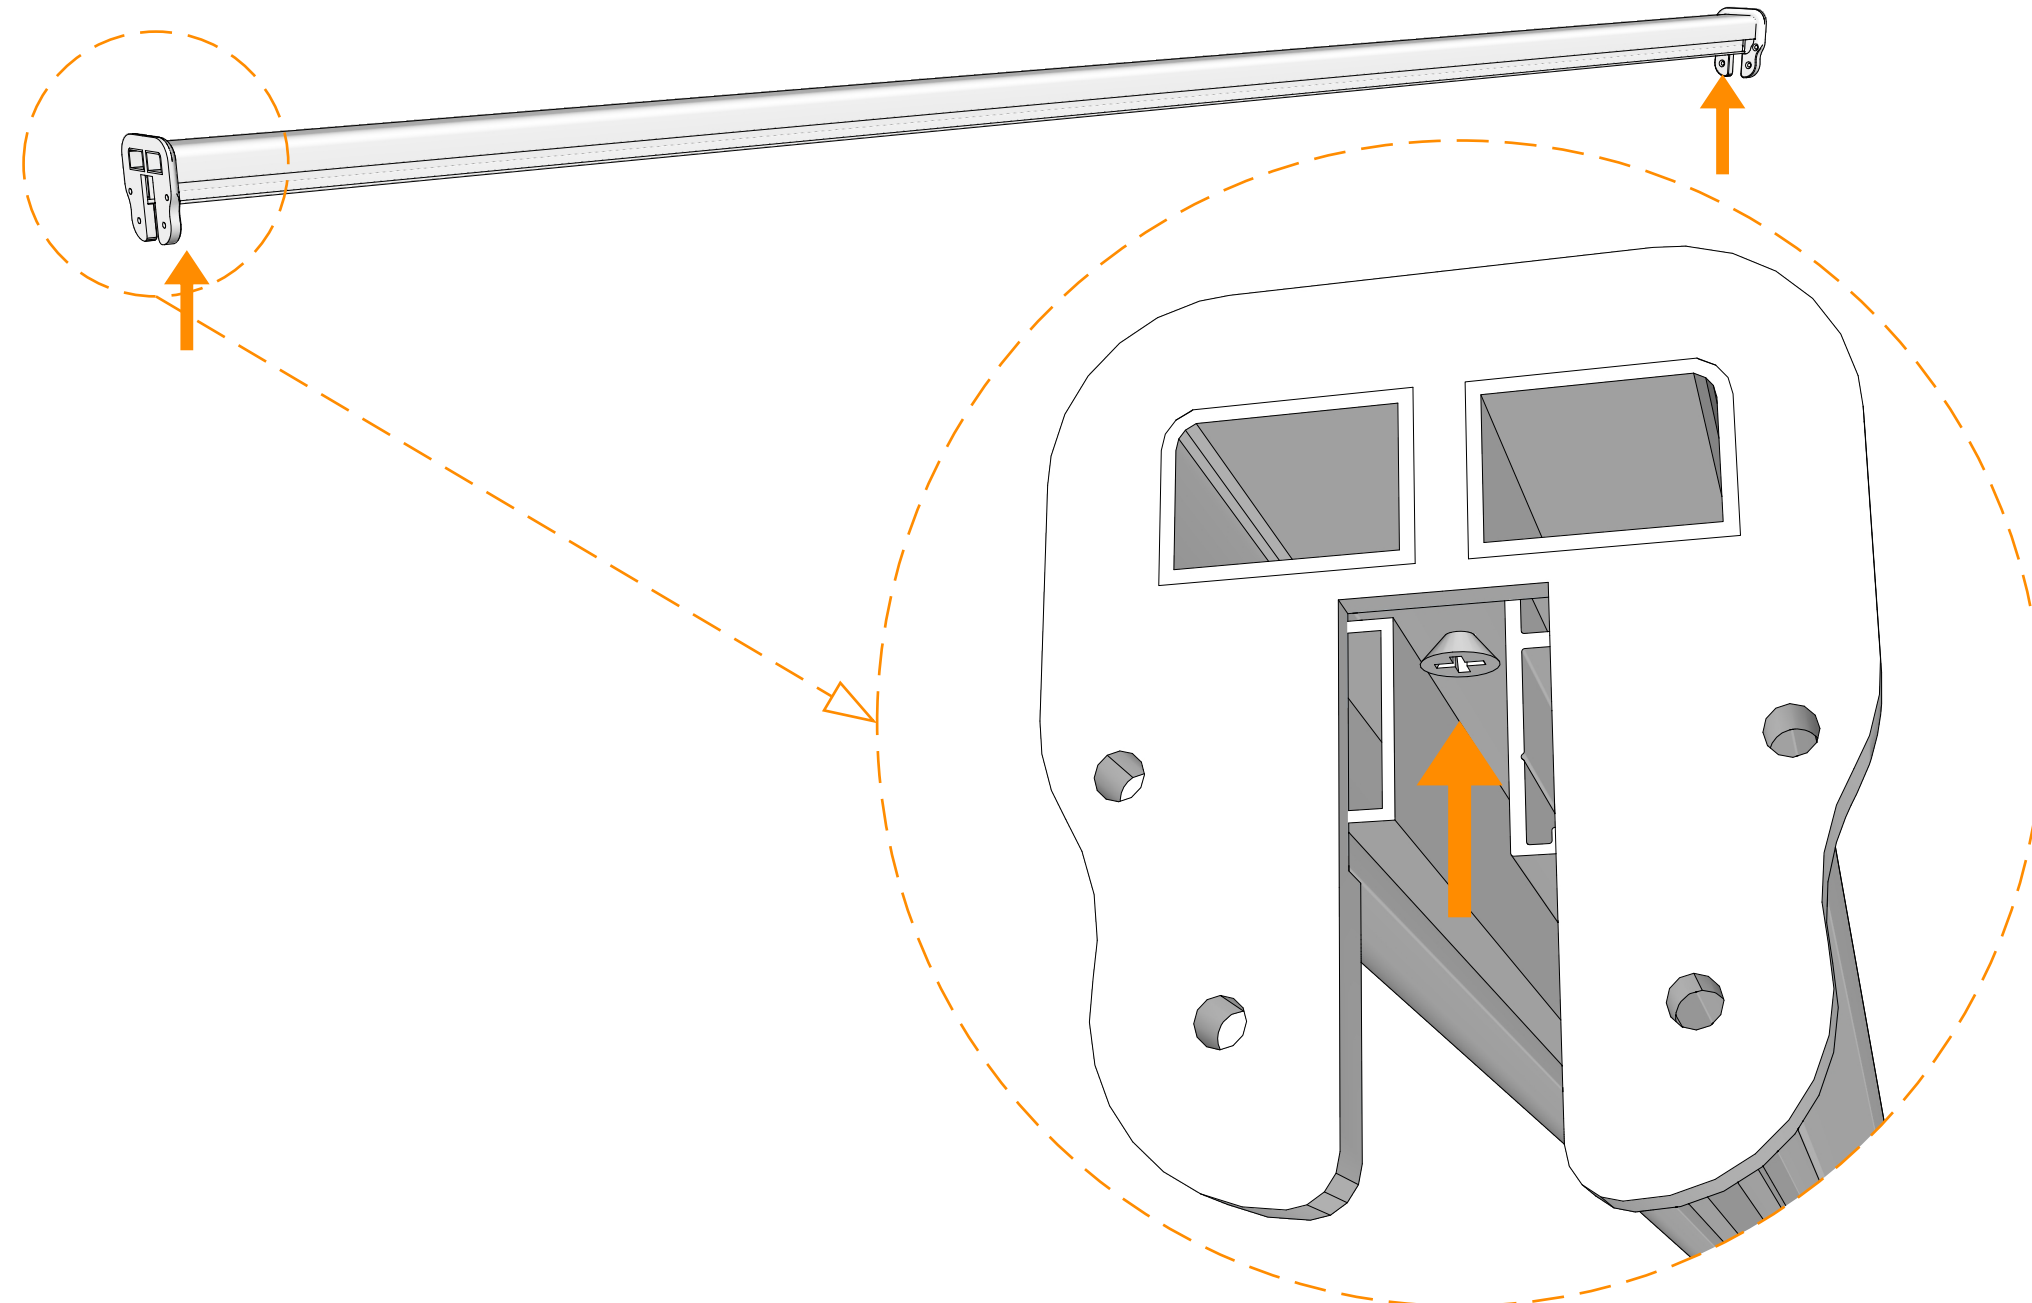

STEP 13:
Fasten HR15 to the Main Post HR01A using Connector Bracket and with Screws


INSTALLATION INSTRUCTIONS
ASSEMBLY PROCEDURE FOR FENCE MODEL M01

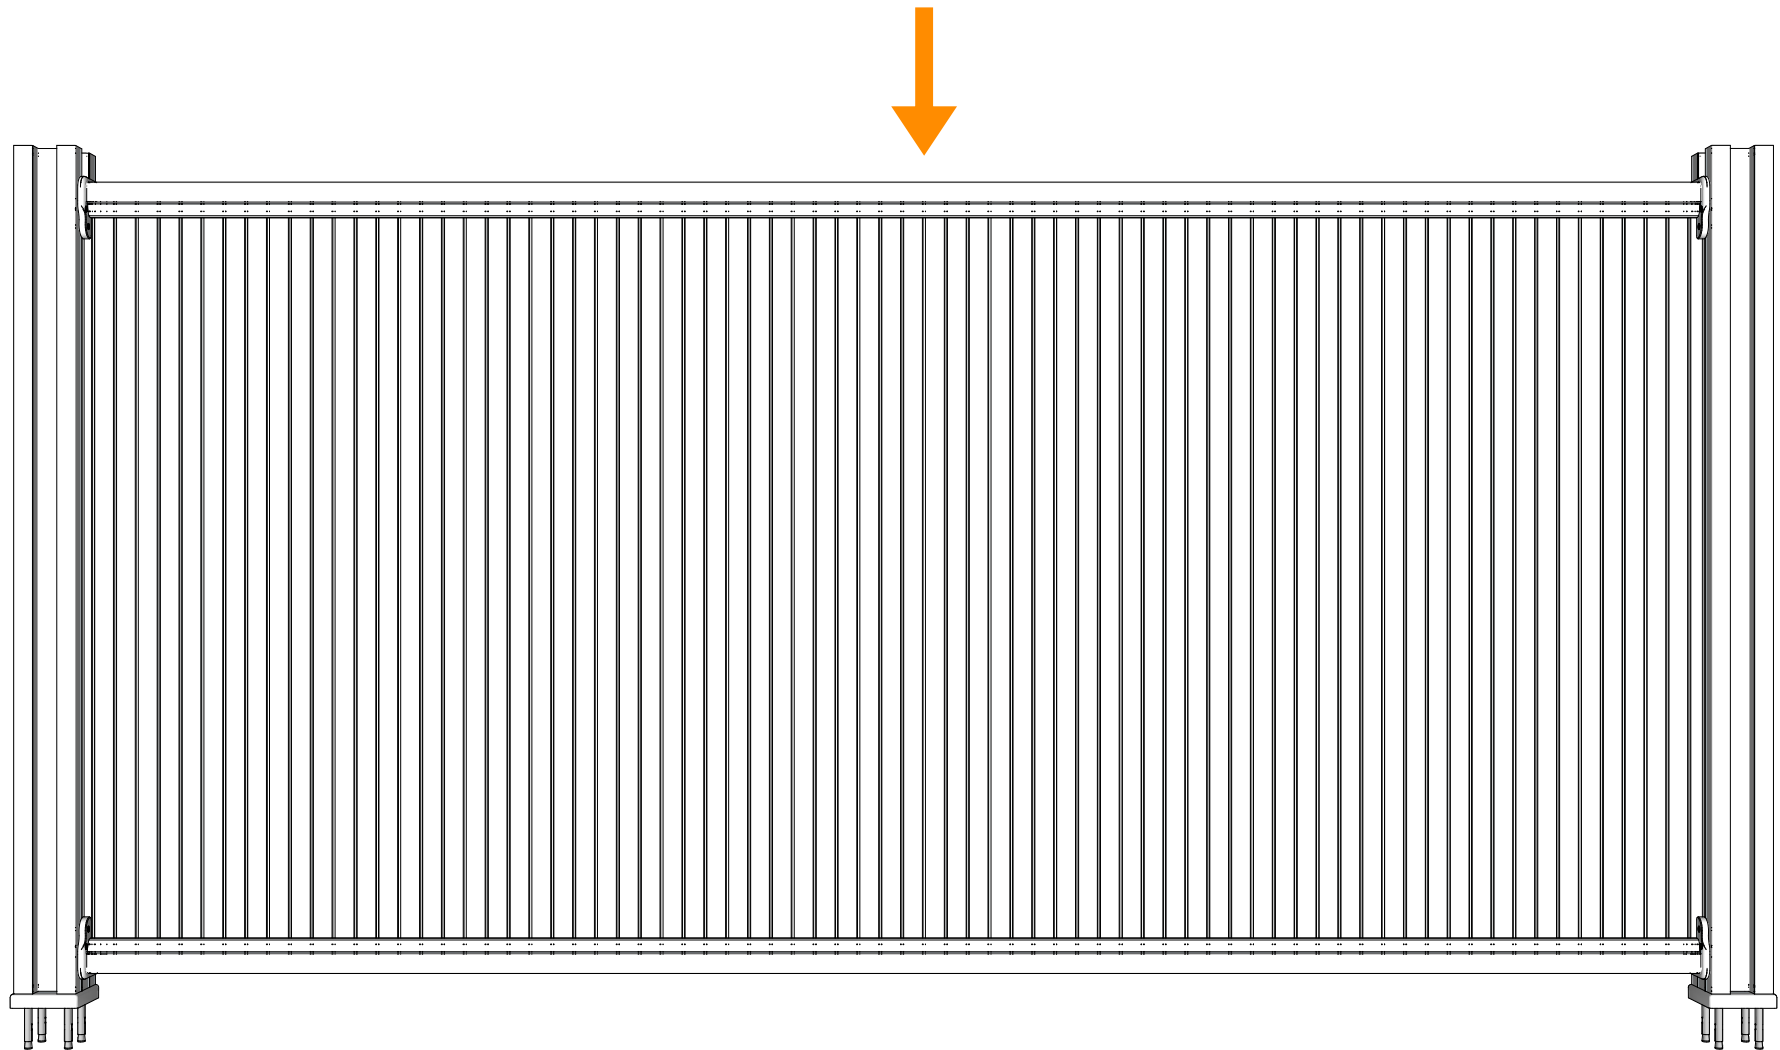

STEP 14:
Install the Bracket-HR15 | HR04 assembly to the top of HR01A.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

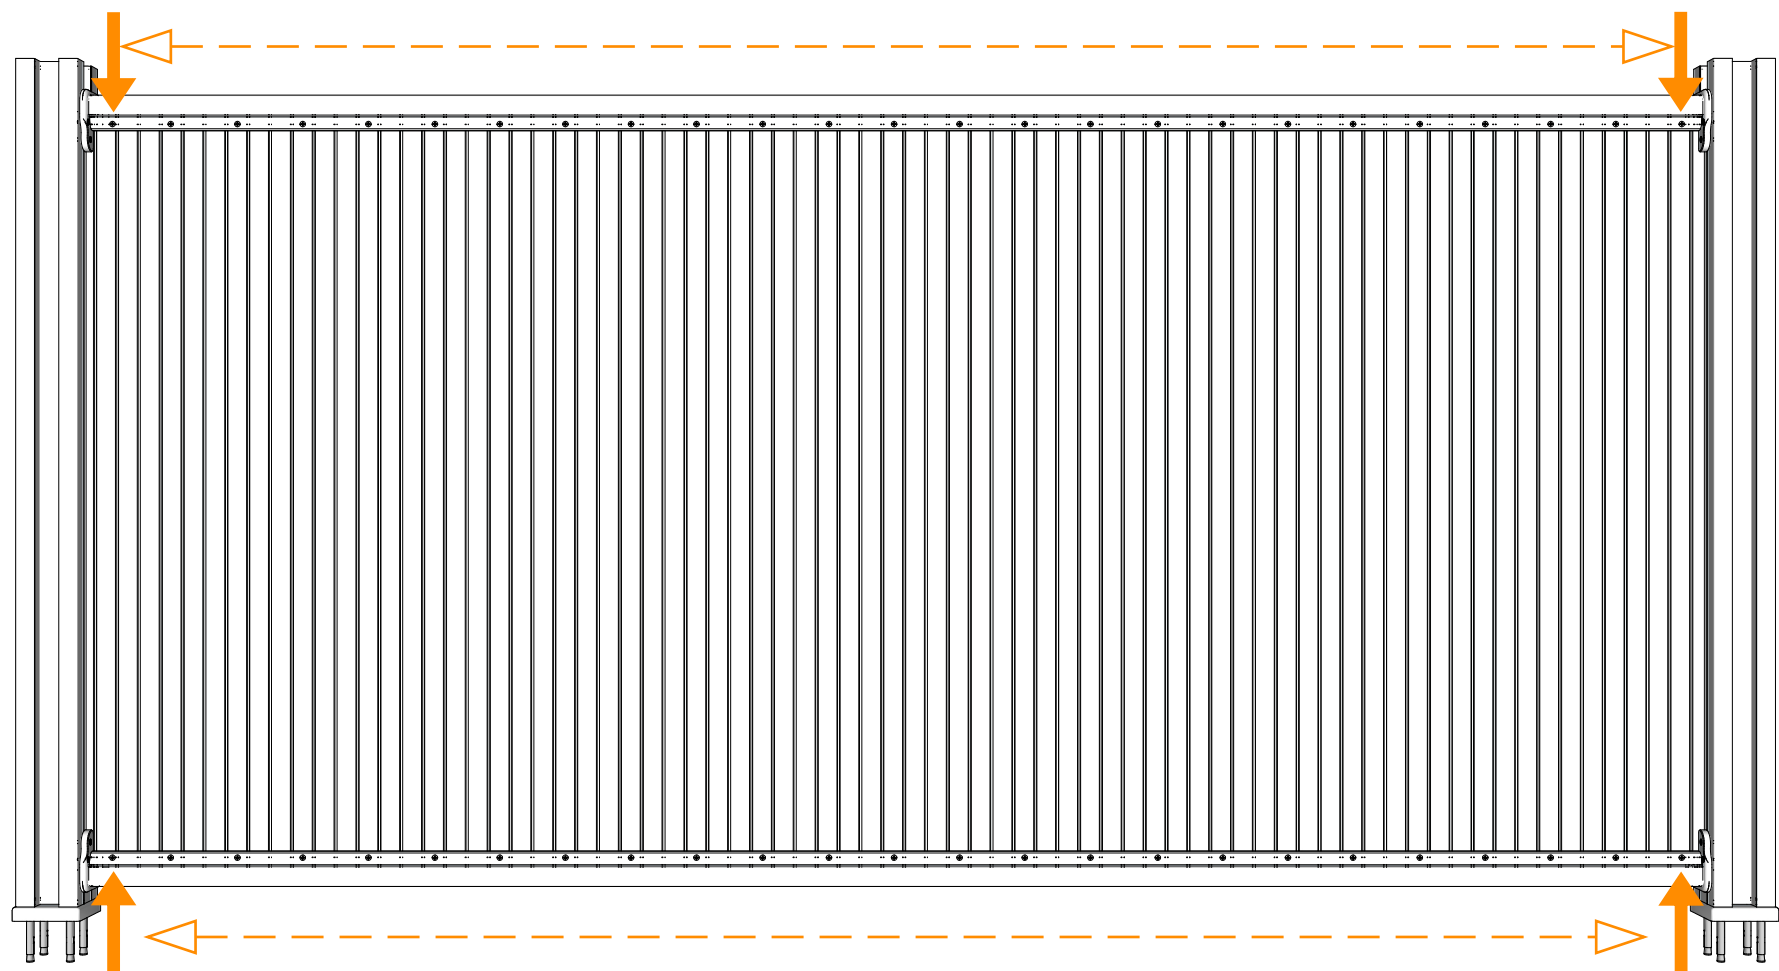

STEP 15:
Fasten ST4.2x17 screw to the 4332S and the HR15.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

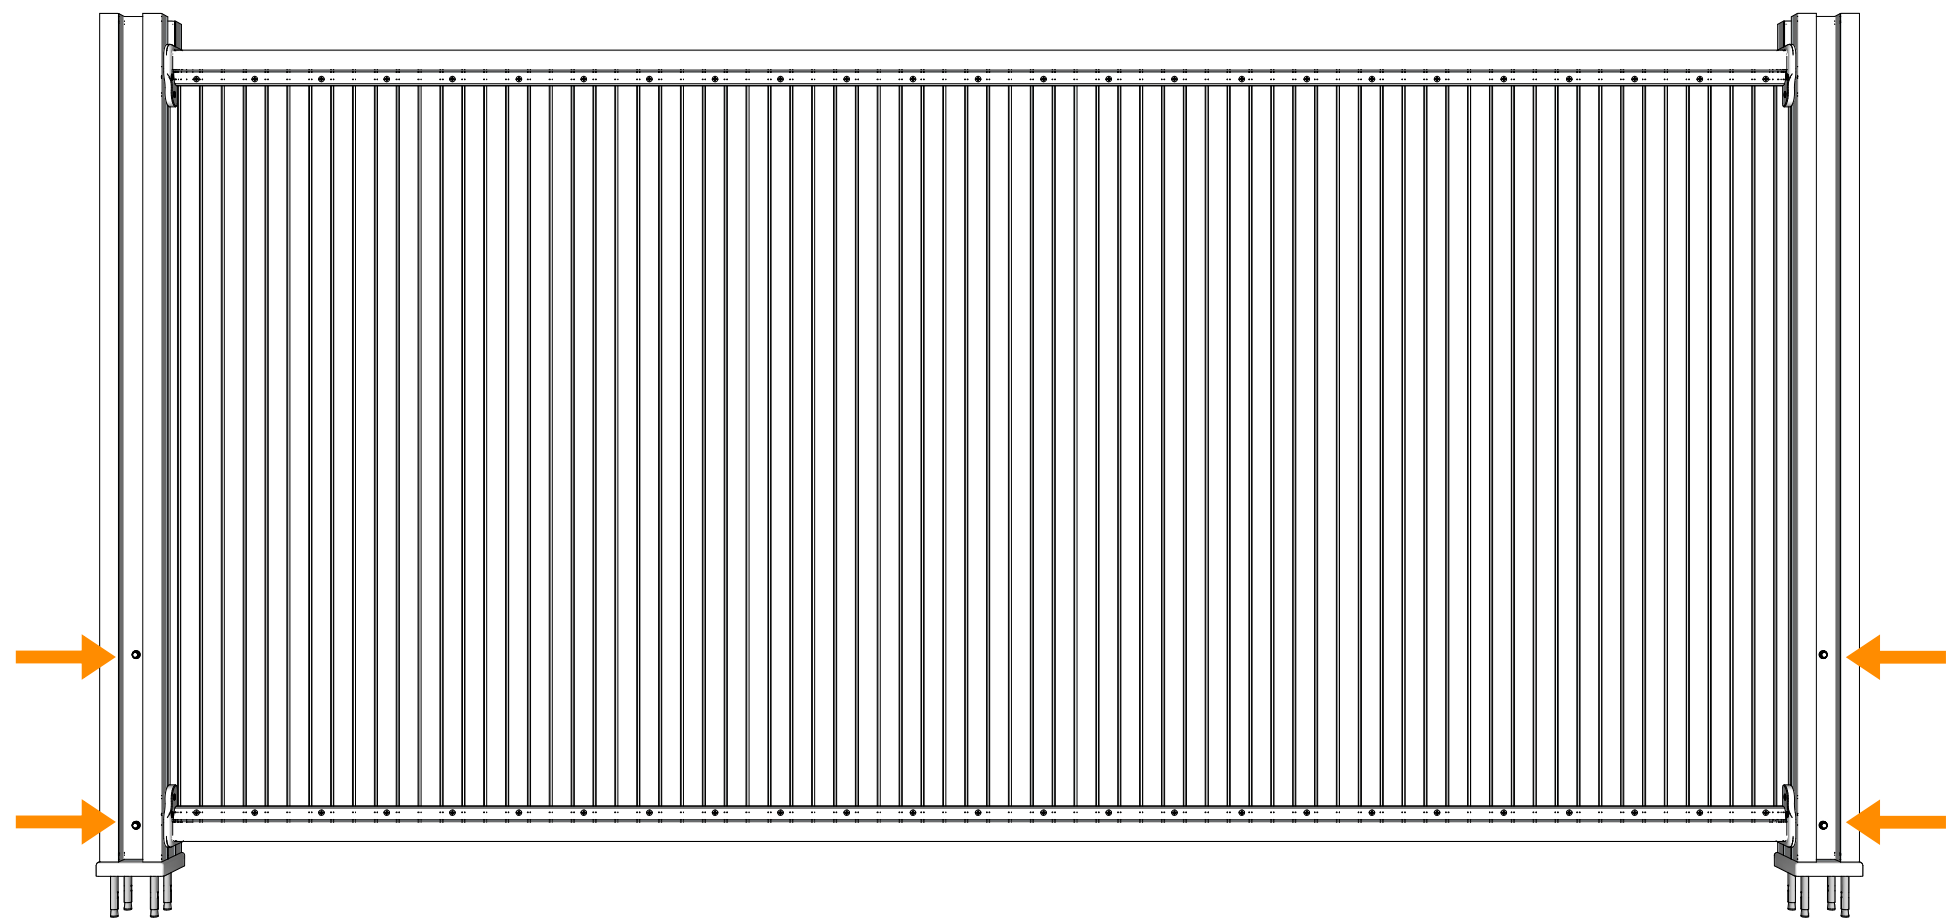

STEP 16:
Fasten to secure the HR01A and Base Plate.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

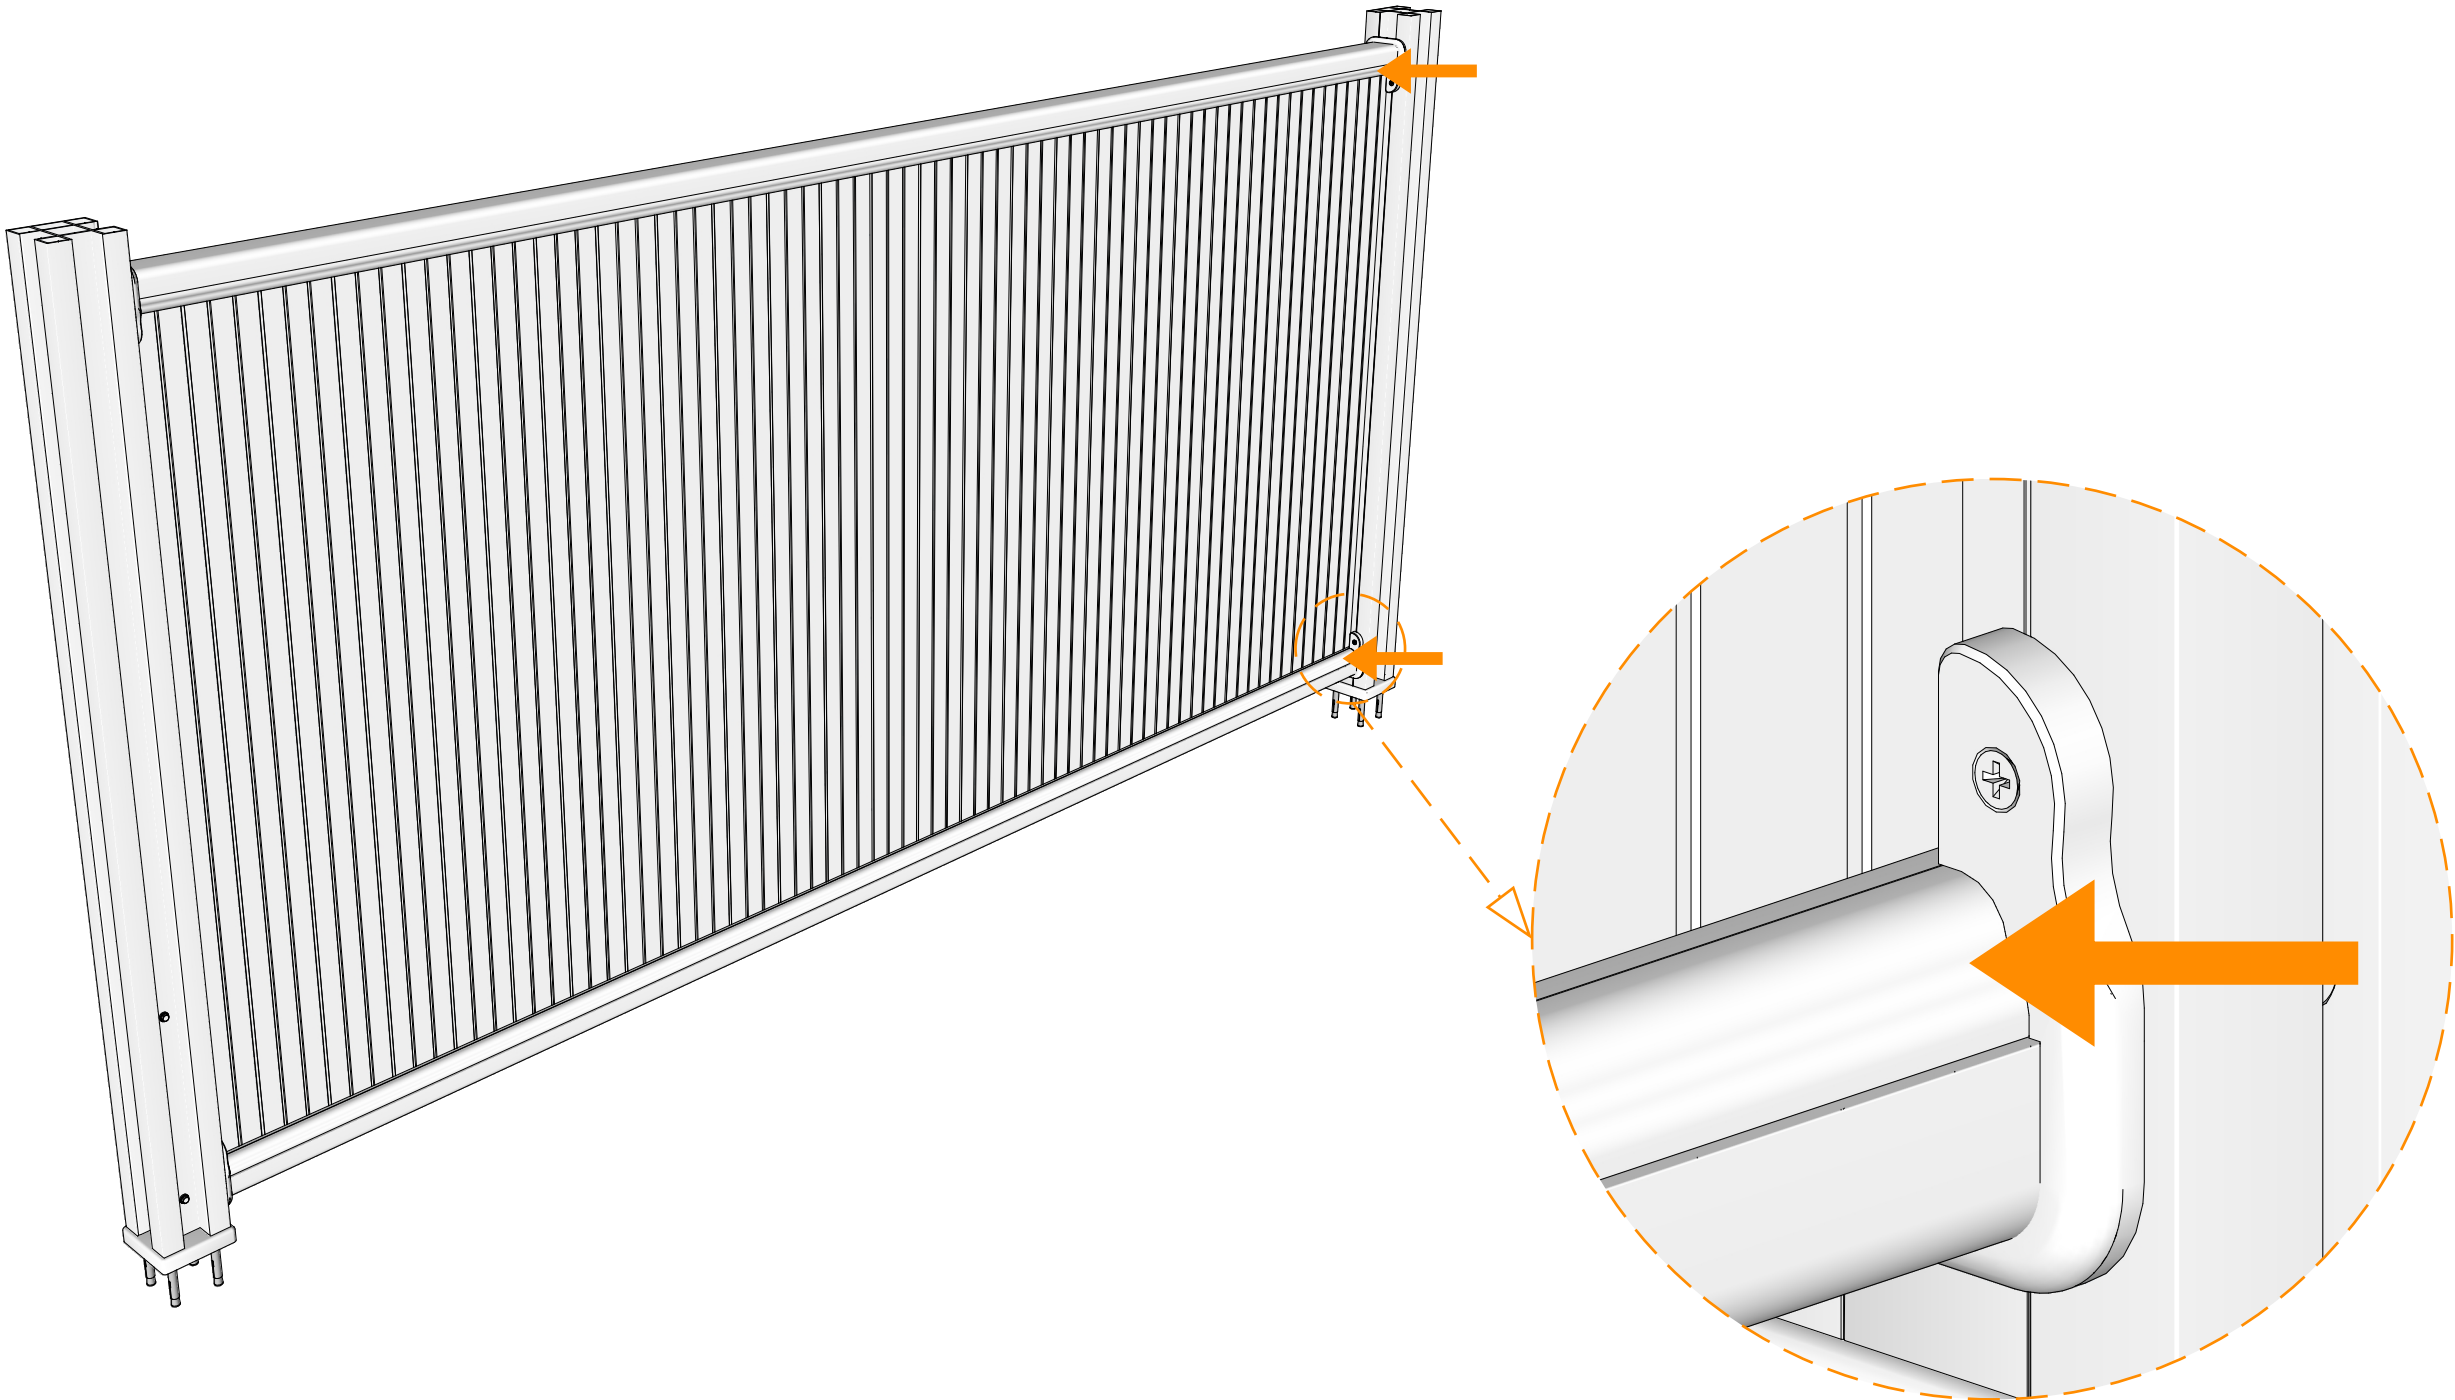

STEP 17:
Install HR16 into the HR15.

INSTALLATION INSTRUCTIONS


ASSEMBLY PROCEDURE FOR FENCE MODEL M01

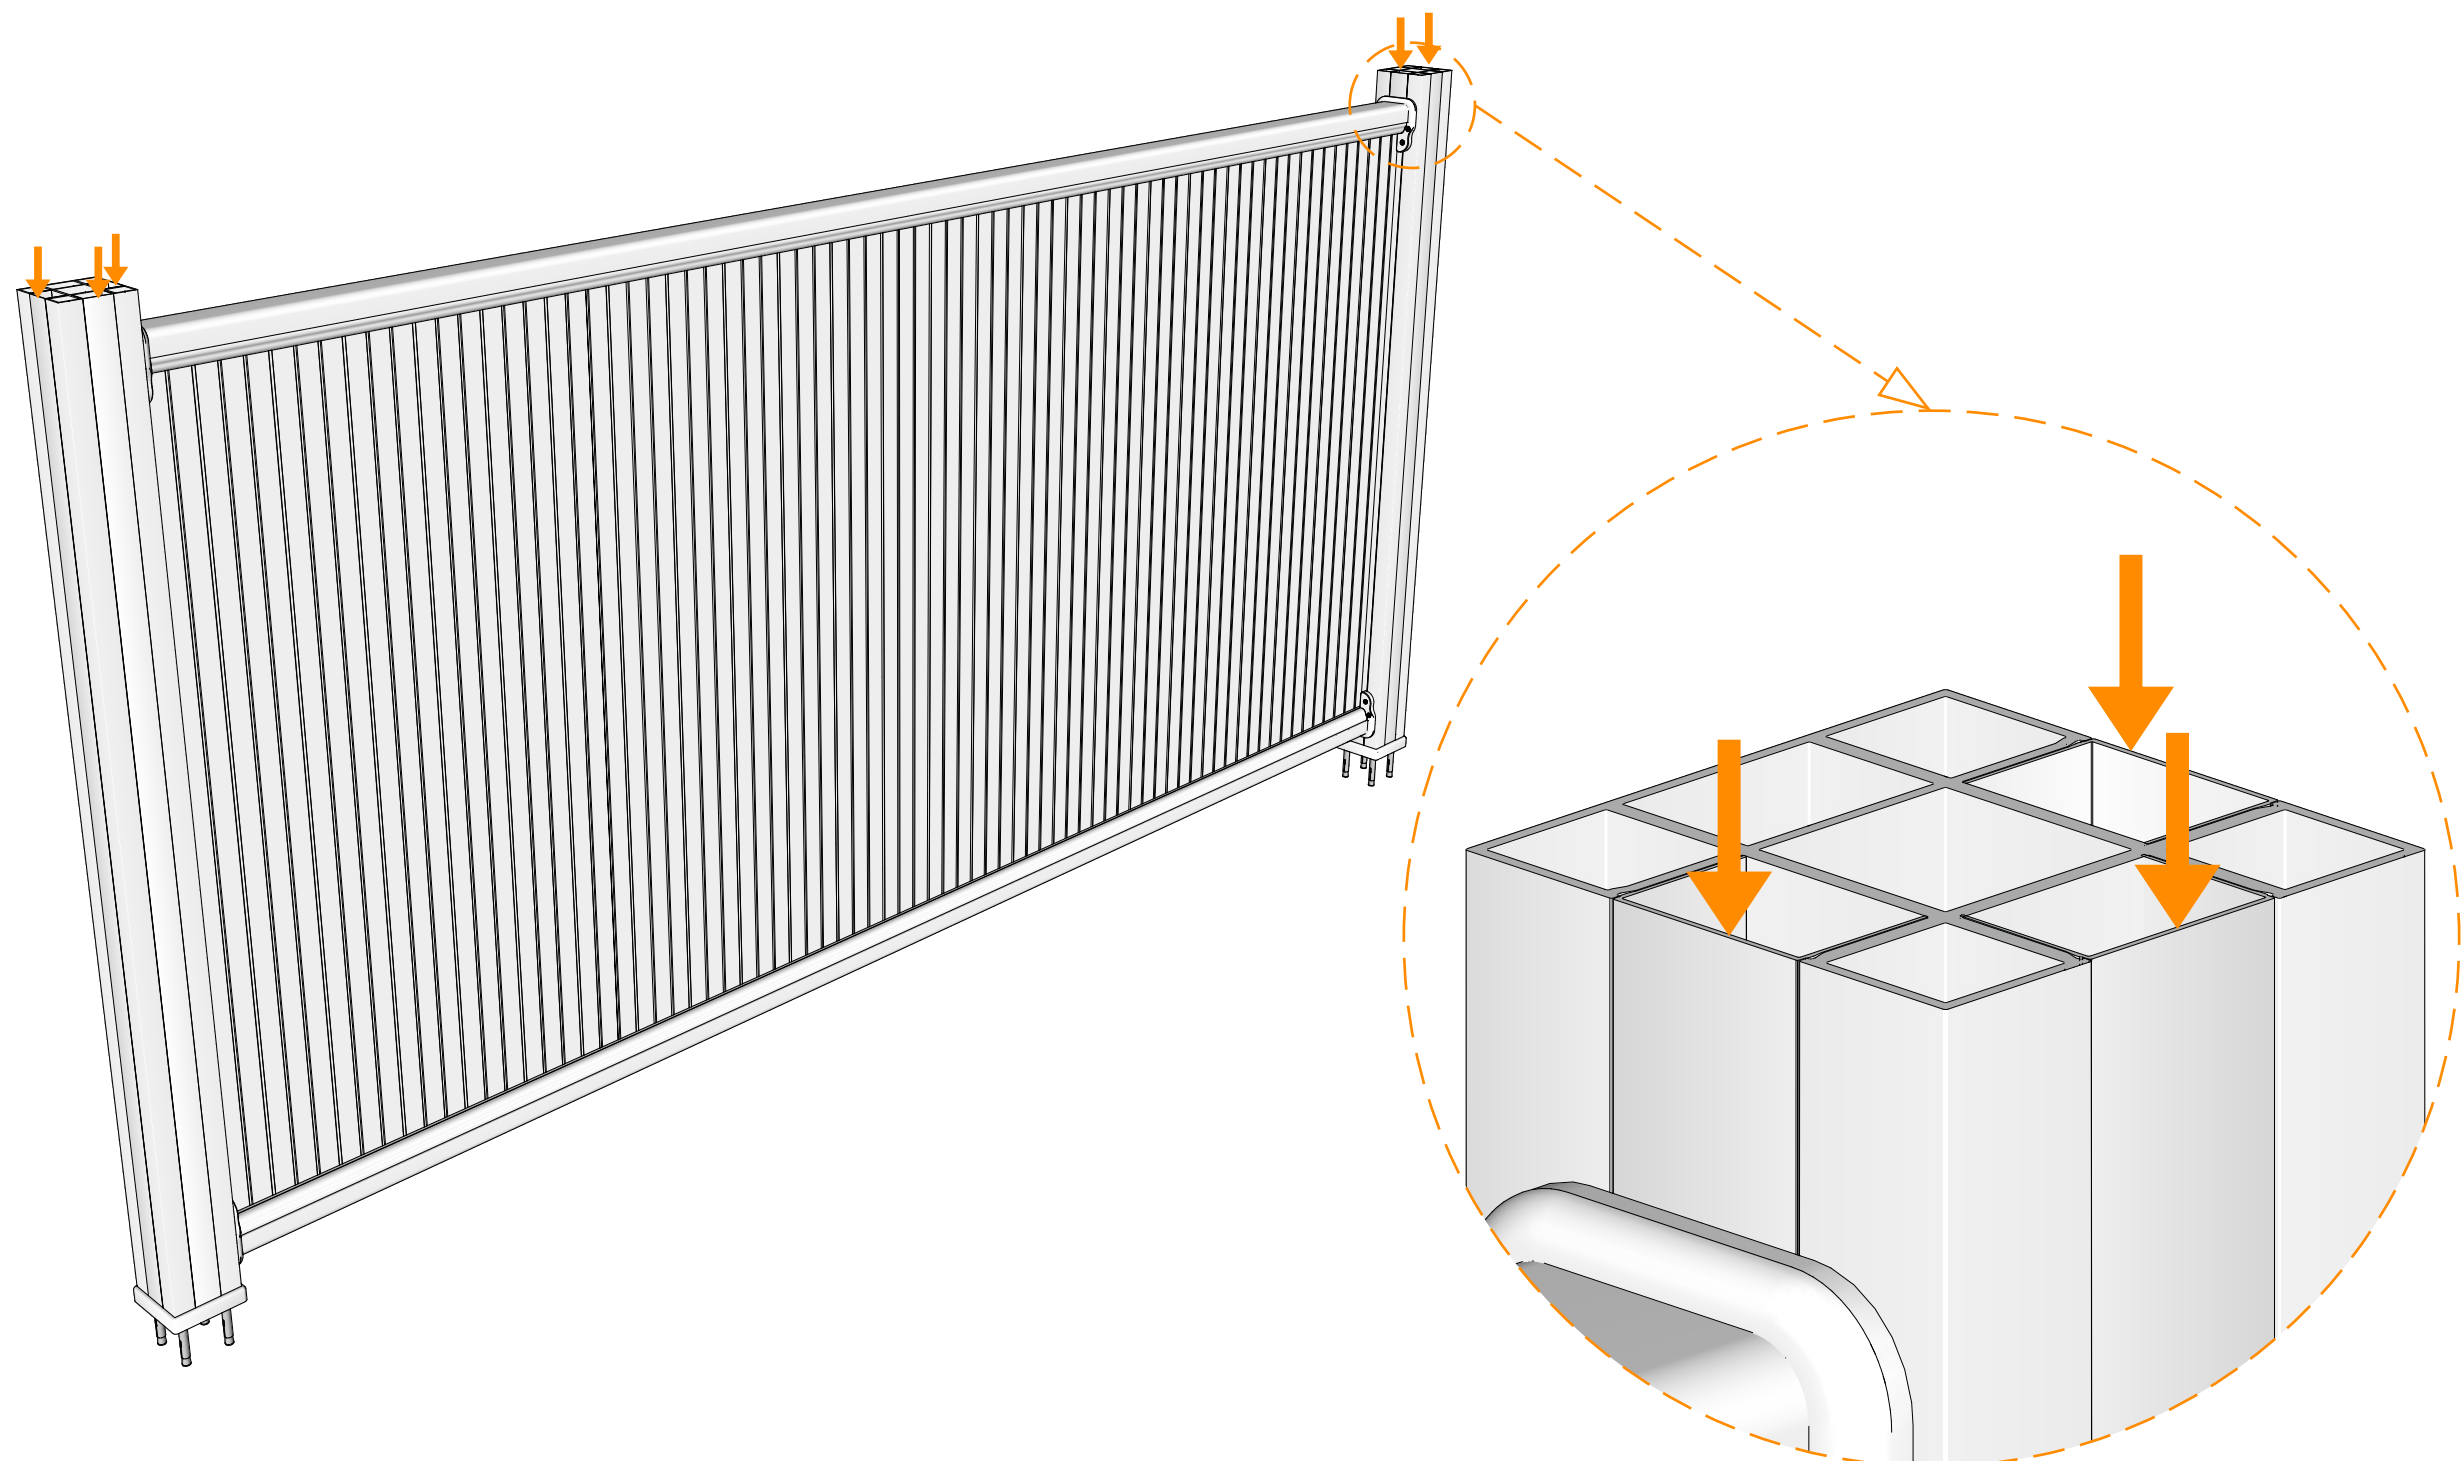

STEP 18:
Install HR04A onto the HR01A posts (in the remaining spaces).

INSTALLATION INSTRUCTIONS

ASSEMBLY PROCEDURE FOR FENCE MODEL M01

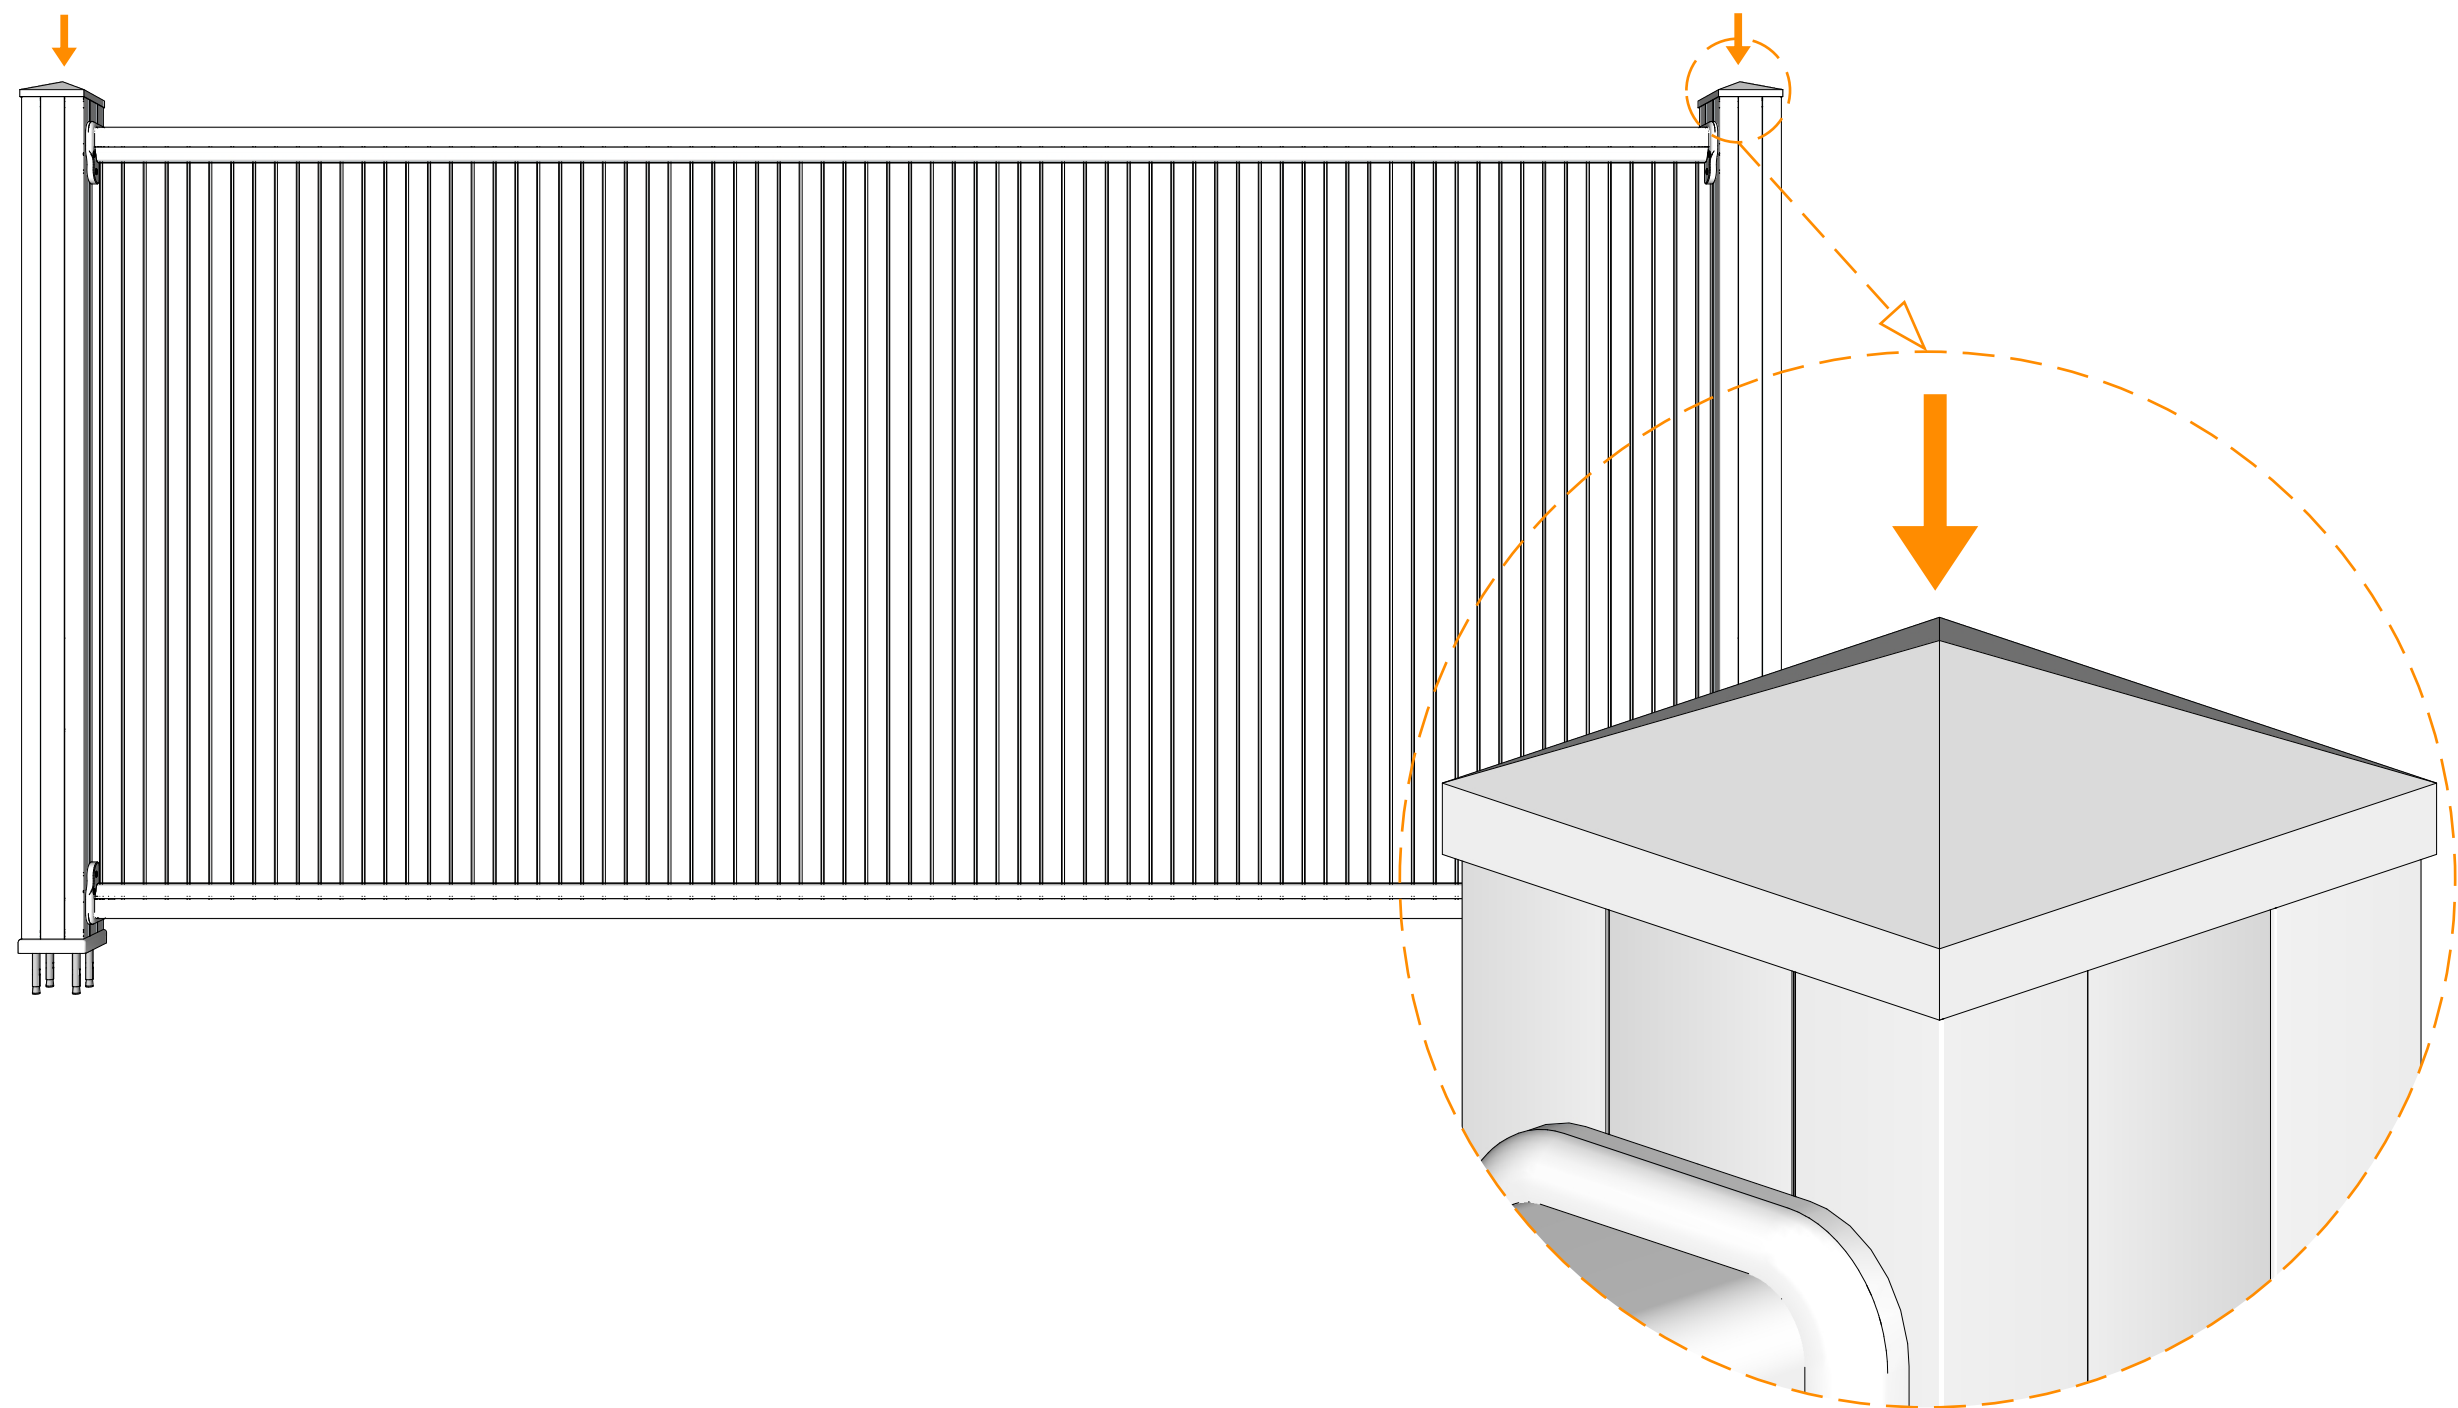

STEP 19:
Place the Post Caps onto the HR01A